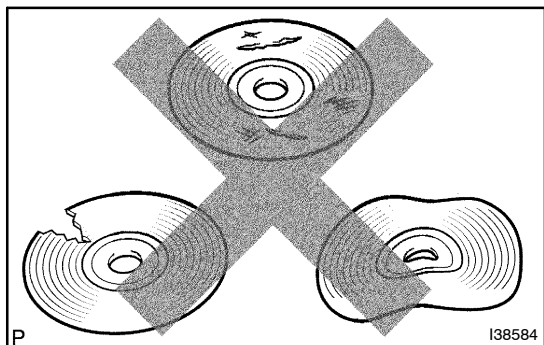


MAP DISC CANNOT BE EJECTED**INSPECTION PROCEDURE****1 CHECK RADIO AND NAVIGATION ASSY**

- (a) Turn the ignition switch to the ACC position.
(b) Keep pressing the "MAP" eject switch for 5 seconds and check if the disc is ejected by forced ejection.
OK: The disc is ejected.

NG**PROCEED TO NEXT CIRCUIT INSPECTION
SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-1094)****OK****2 CHECK THE MAP DISC**

- (a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG**REPLACE THE MAP DISC****OK****NORMAL OPERATION**