


VEHICLE POSITION MARK IS NOT UPDATED

INSPECTION PROCEDURE

1 CHECK THE MAP DISC

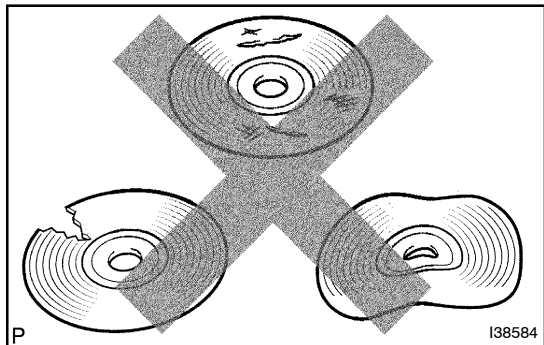

- (a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG

REPLACE THE MAP DISC

OK

2 CHECK THE MAP DISPLAY

- (a) Check if a touch scroll can be performed on the map display.
OK: Touch scroll can be performed.


NG

PROCEED TO NEXT CIRCUIT INSPECTION
 SHOWN IN PROBLEM SYMPTOMS TABLE
 (SEE PAGE 05-1094)

OK

3 NAVIGATION CHECK MODE (VEHICLE SENSORS CHECK)

- (a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05-1104).

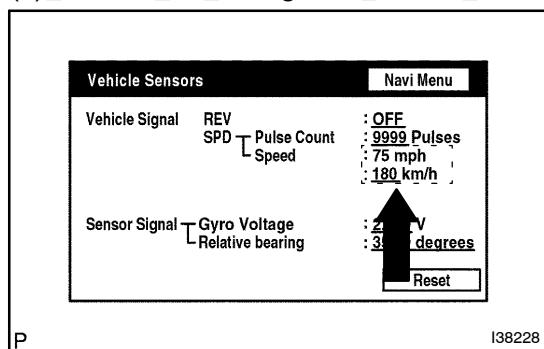

- (b) While driving, compare the "SPD" indicator to the reading on the speedometer. Check if these readings are almost the same.

OK: The readings are almost the same.

NG

GO TO "SPEED SIGNAL CIRCUIT" IN THE FLOW
 CHART (SEE PAGE 05-1153)

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
 (SEE PAGE 05-1094)