


# CURRENT POSITION DISPLAY DOES NOT APPEAR

## INSPECTION PROCEDURE

### 1 CHECK RADIO AND NAVIGATION ASSY

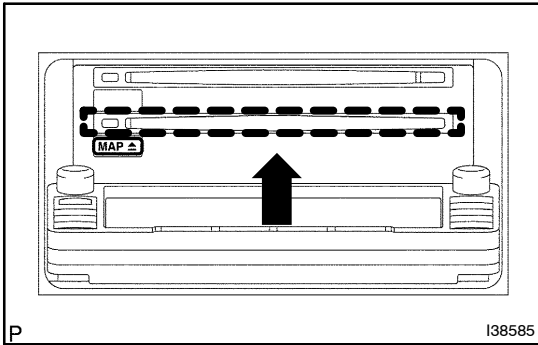


- (a) Check if a map disc is inserted in the map disc slot.  
**OK: A map disc is inserted.**

NG

**INSERT THE MAP DISC IN THE "MAP" SIDE SLOT**

OK

### 2 CHECK THE MAP DISC

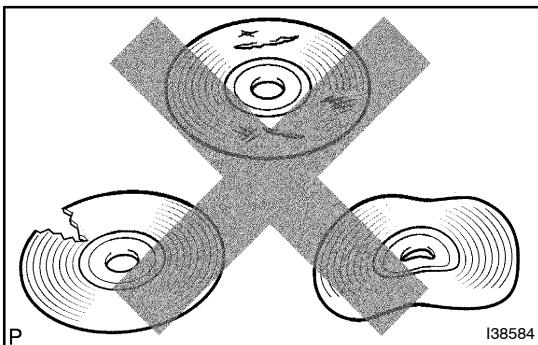

- (a) Check that the map disc is not deformed or cracked.  
**OK: No deformations or cracks appear on the map disc.**

NG

**REPLACE THE MAP DISC**

OK

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE  
 (SEE PAGE 05-1094)**