


GYRO ERROR

INSPECTION PROCEDURE

1 NAVIGATION CHECK MODE (VEHICLE SENSORS CHECK)

(a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05-1104).

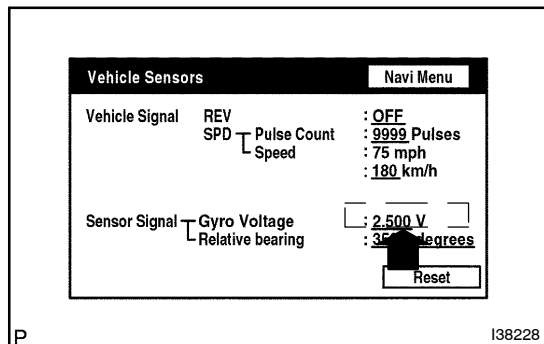

(b) Check the gyro voltage.

Standard: 0.1 to 4.5 V

NG

**REPLACE RADIO AND NAVIGATION ASSY
(SEE PAGE 67-1)**

OK

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART
(SEE PAGE 05-1094)**