



COMBINATION METER LOCATION


05KBW-01

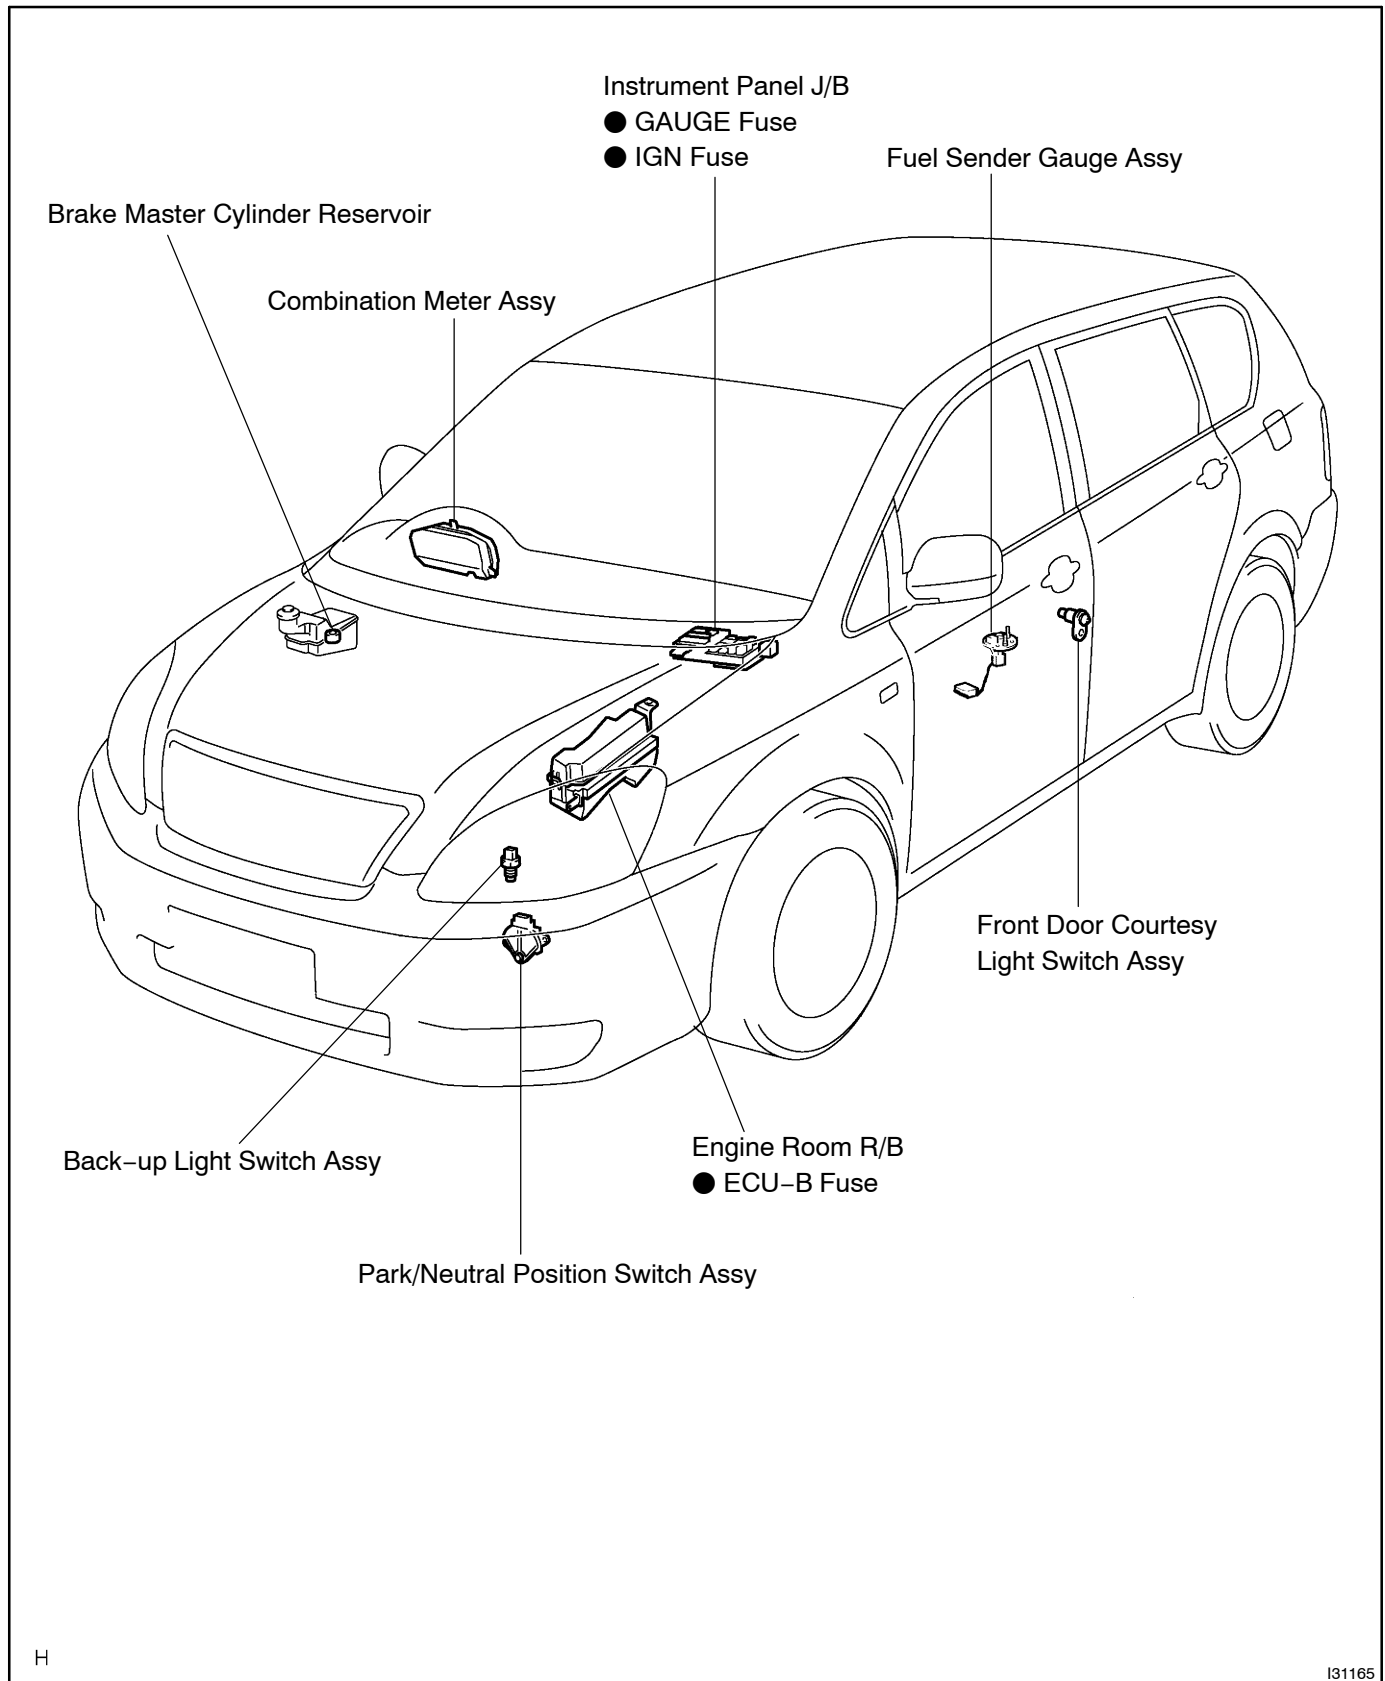


H


I31165

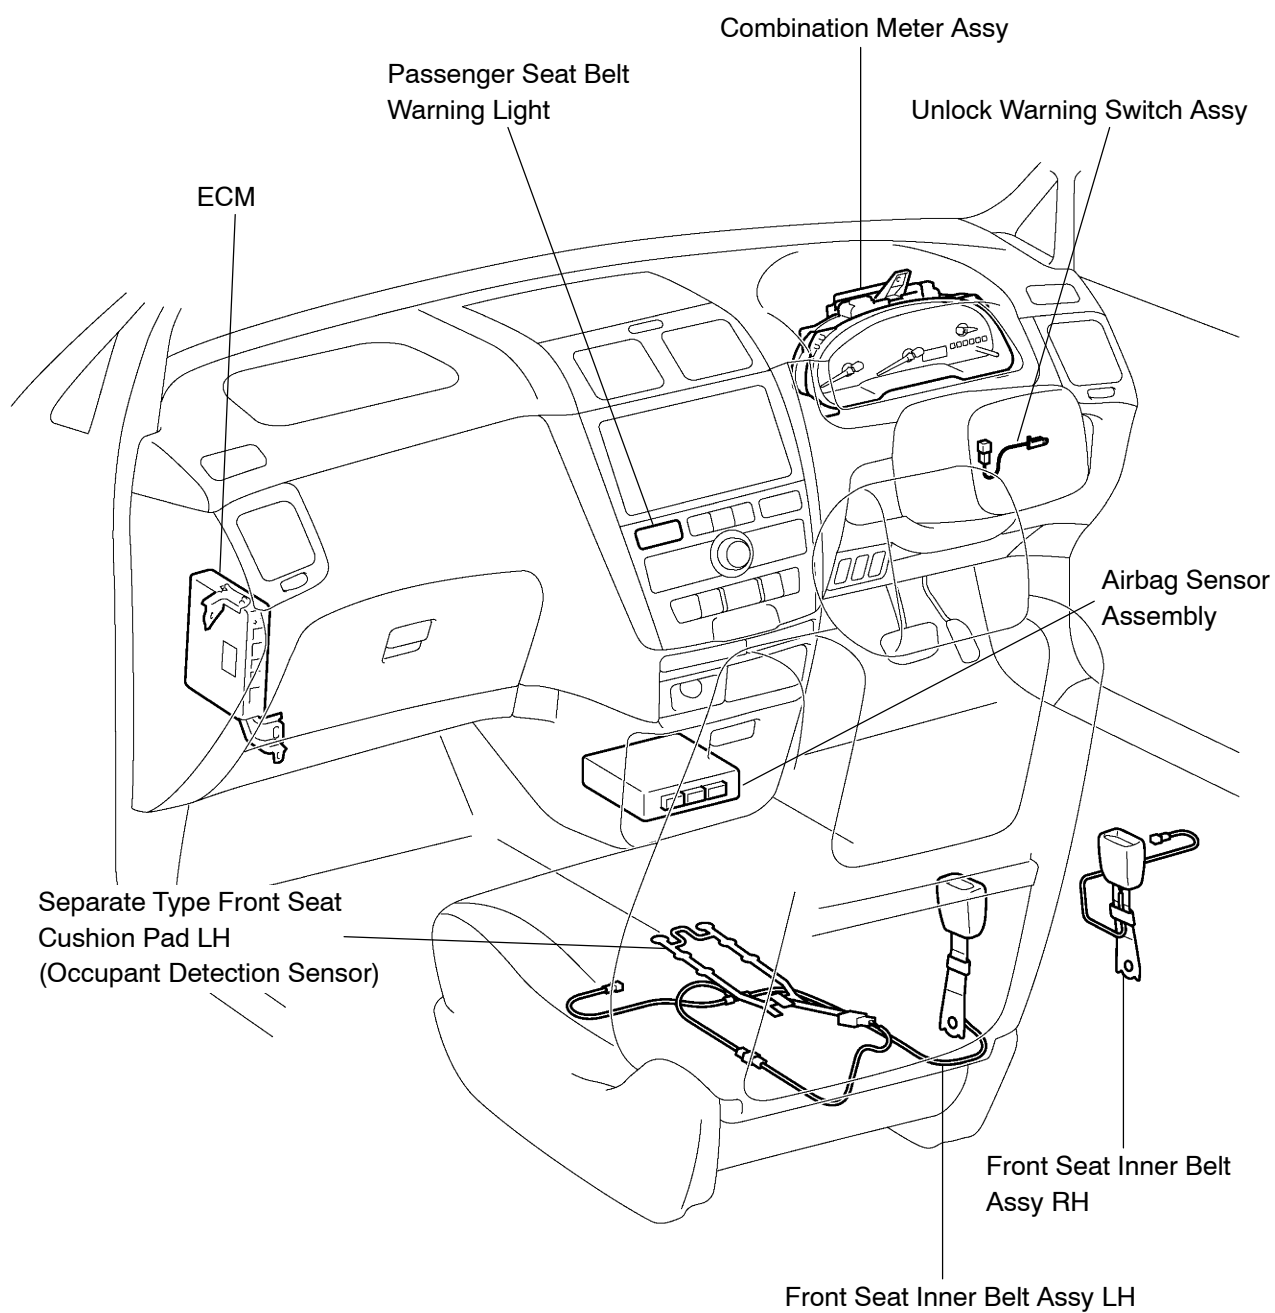


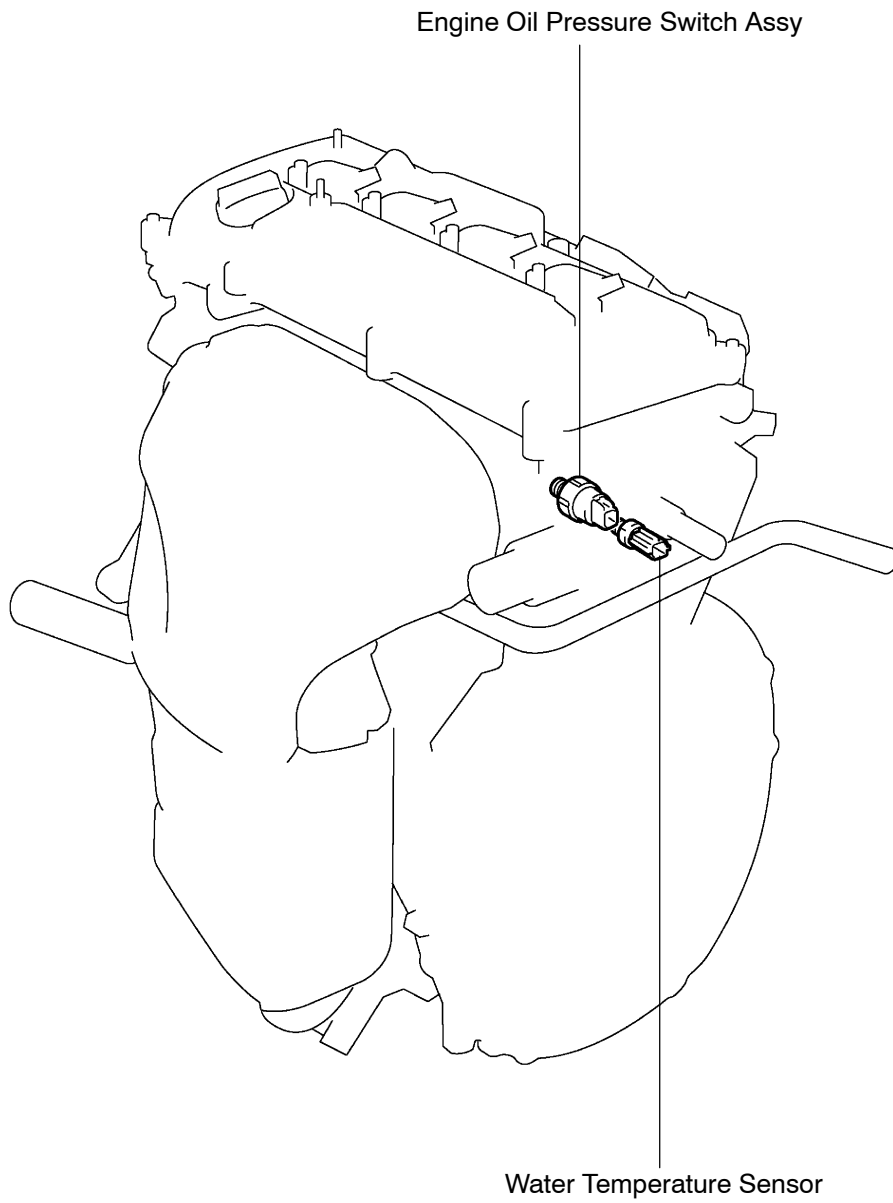

H

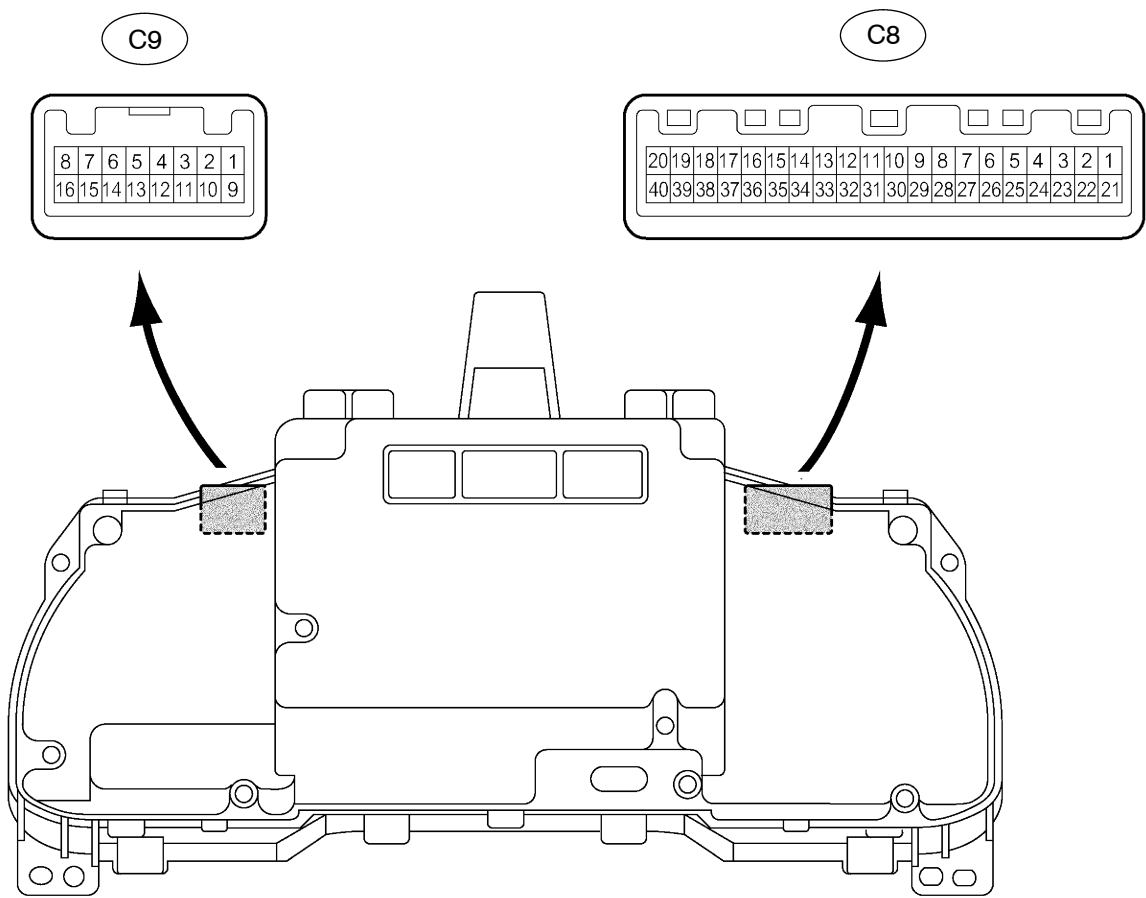

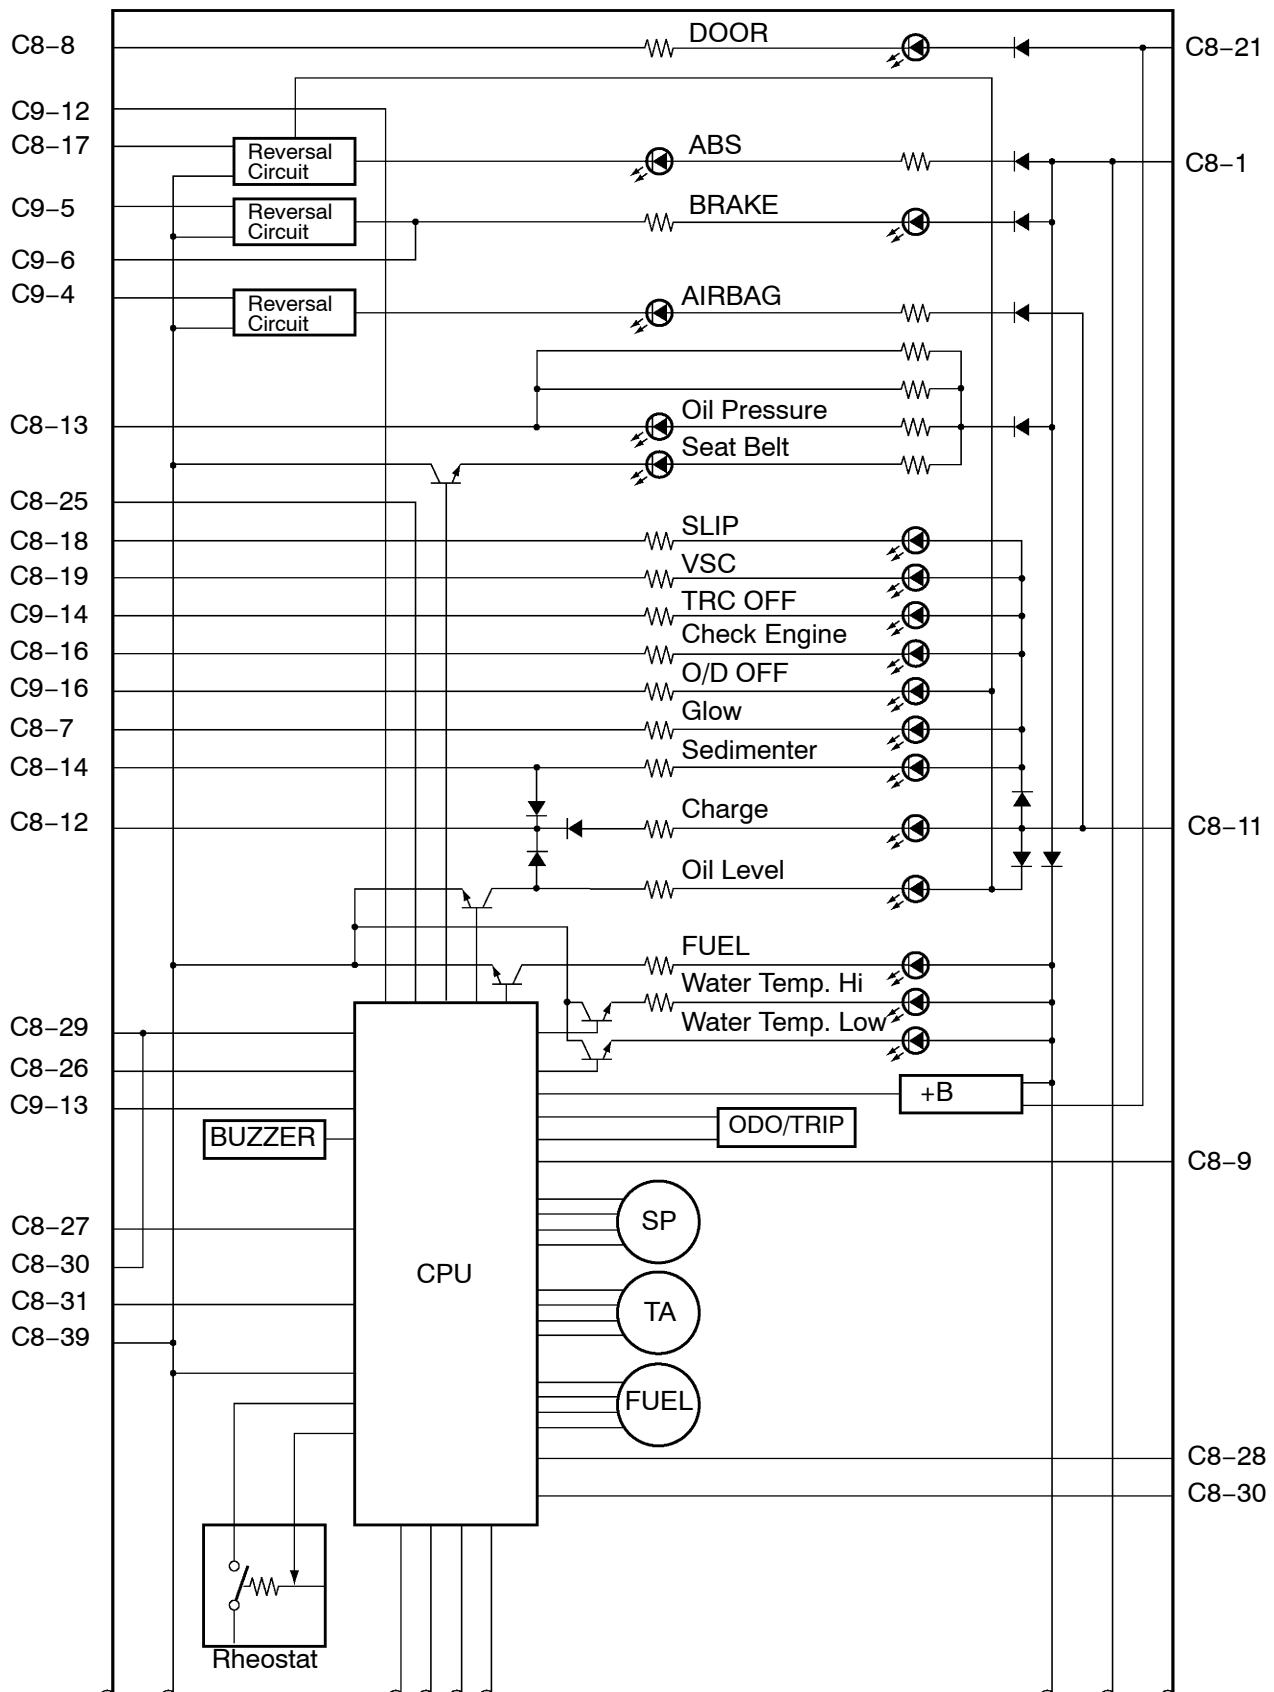Except Australia:

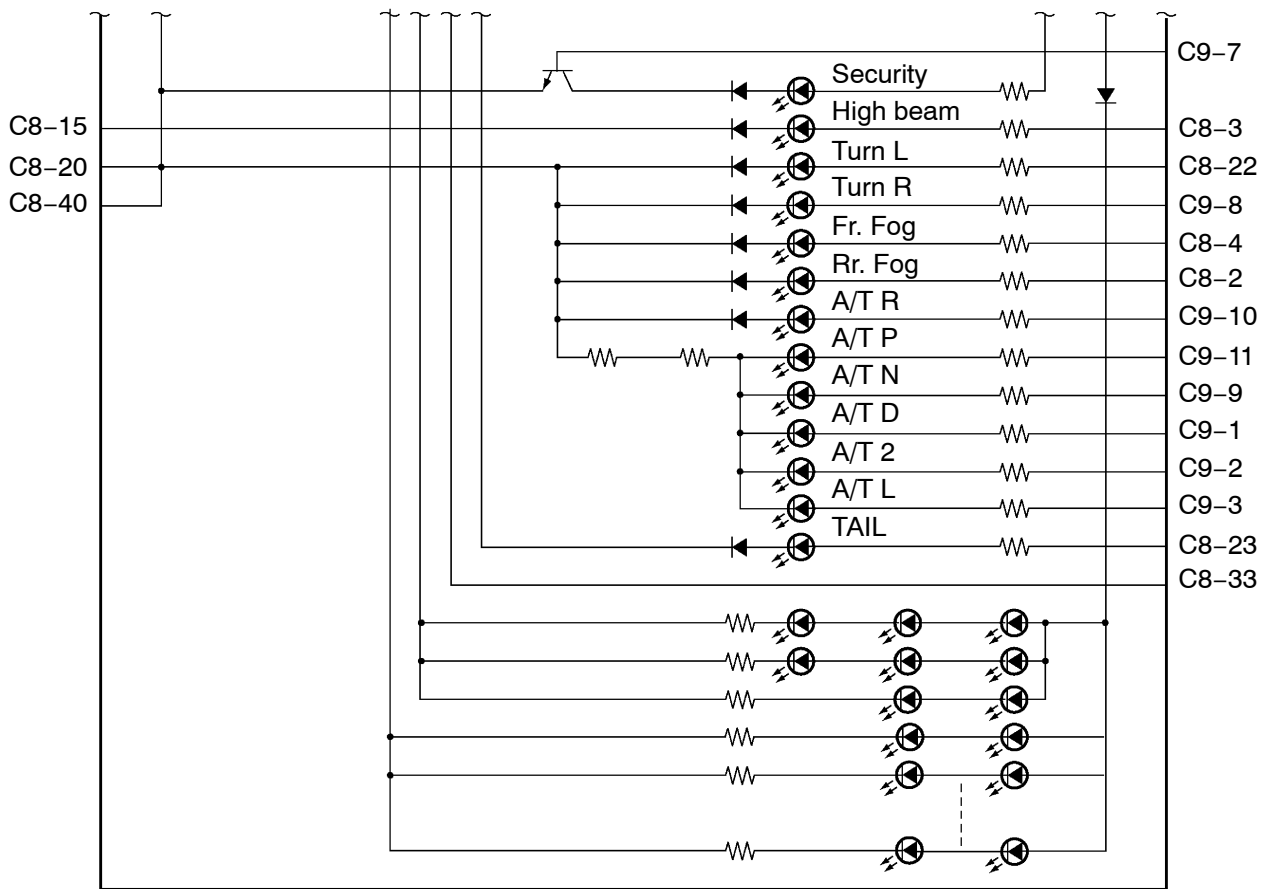Except Australia:

H

I40713

Except Australia:


Terminal No.	Wire harness side
1	GAUGE Fuse
2	Body ECU
3	Headlight Dimmer Relay
4	Rear Fog Light Relay
7	ECM
8	Door Courtesy Switch
9	Starter Relay
11	IGN Fuse
12	Alternater
13	Oil Pressure Switch
14	Fuel Filter Warning Switch
15	Headlight Lamp
16	ECM
C8	Skid Contorl ECU with Actuator (VSC)
	Skid Contorl ECU with Actuator (ABS)
	Skid Contorl ECU with Actuator (VSC)
	Skid Contorl ECU with Actuator (VSC)
	Ground (Signal Ground)
	ECU-B Fuse
	Flasher Relay
	Tail Fuse
	Driver Side Buckle Switch
	ECM
	Skid Contorl ECU with Actuator (VSC)
	Skid Contorl ECU with Actuator (ABS)
	4P-OUT
	ECM
	*1: A/C Control Amplifier
	*2: PTC Heater Amplifier
31	Fuel Sender Gauge
33	Light Control Relay
39	Ground (Fuel Ground)
40	Power Ground

Terminal No.	Wire harness side
1	ECM (Shift indicator D)
2	ECM (Shift indicator 2)
3	ECM (Shift indicator L)
4	Airbag Sensor Assy Center
5	Skid Contorl ECU with Actuator (VSC)
	Skid Contorl ECU with Actuator (ABS)
C9	6 Brake Switch (Vacuum, Fluid Level)
	7 Transponder Key ECU
	8 Flasher Relay
	9 ECM (Shift indicator N)
	10 ECM (Shift indicator R)
	11 ECM (Shift indicator P)
	12 Door Courtesy Switch
	13 Engine Oil Level Sensor
	14 Skid Contorl ECU with Actuator (VSC)
	16 O/D Switch

*1: Automatic A/C

*2: Manual A/C

Australia:

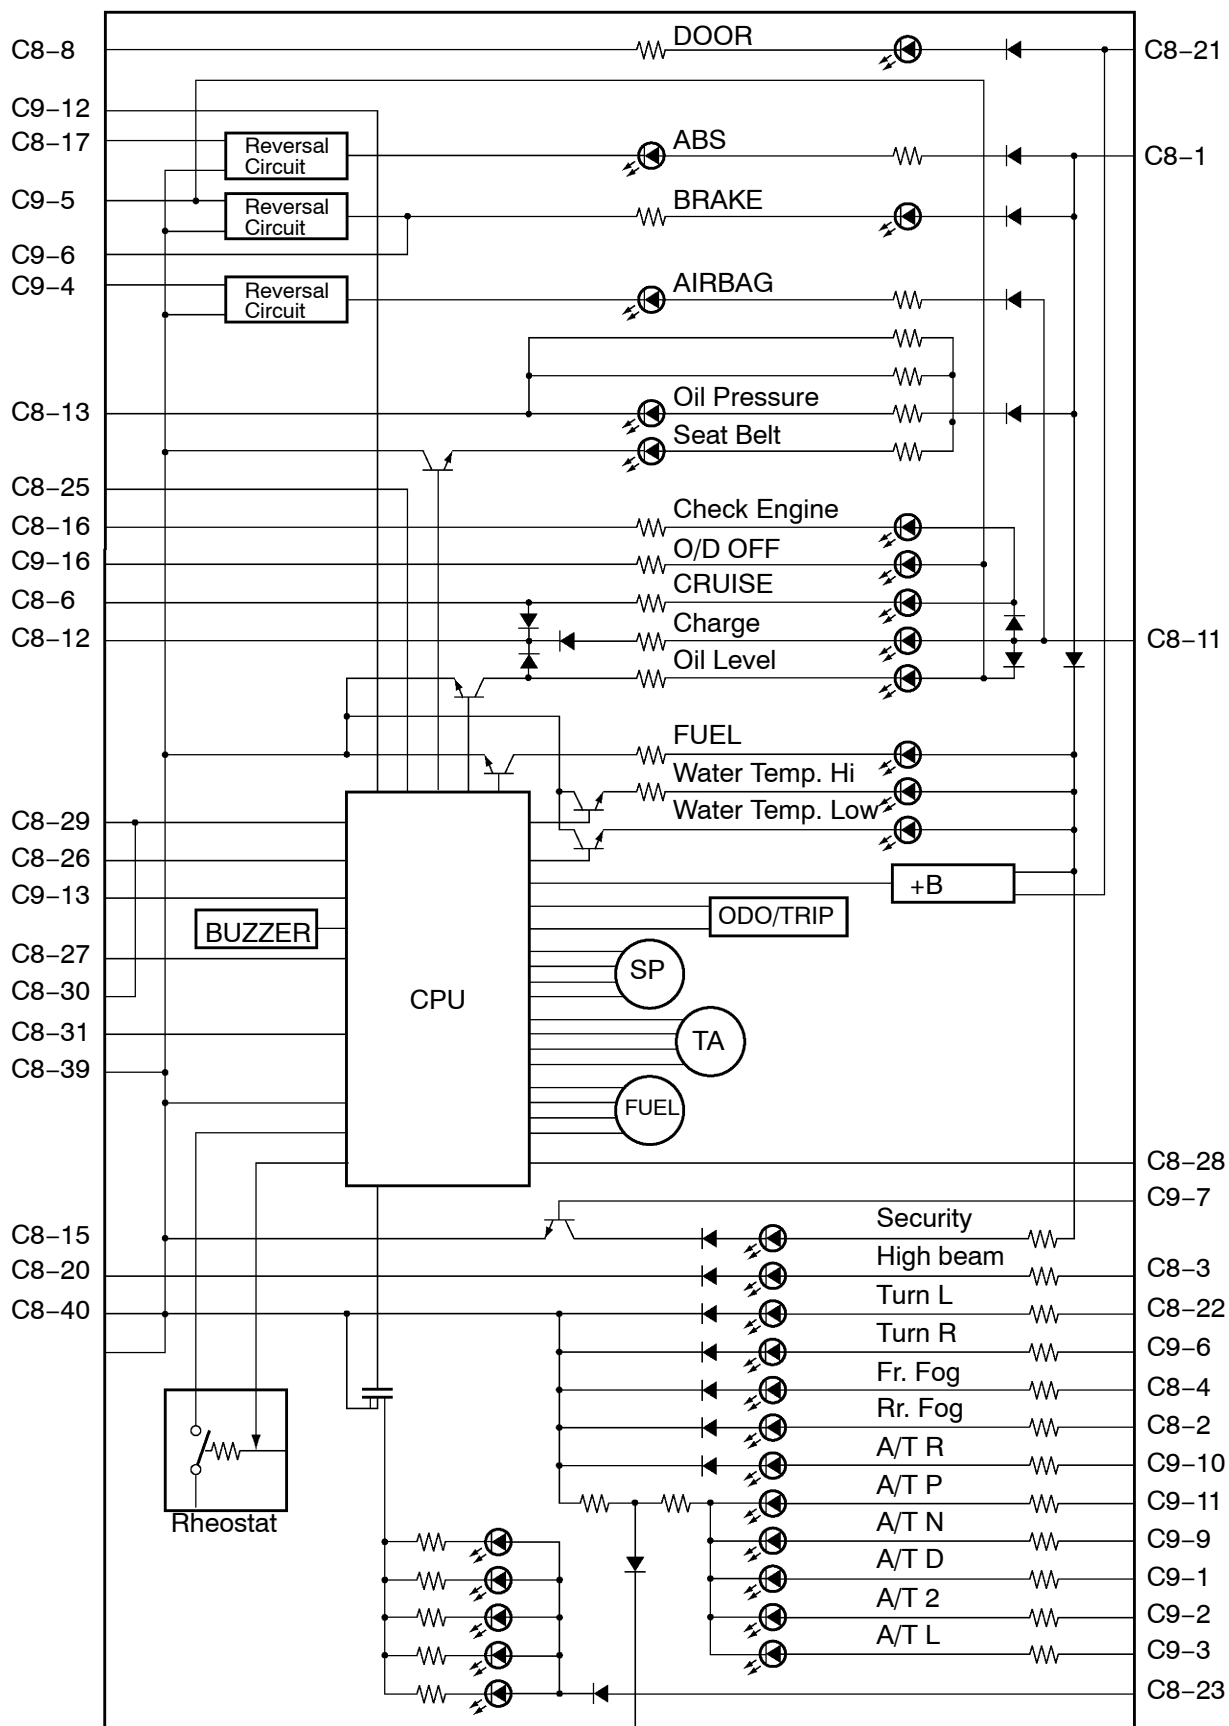

H

I40711

Australia:

Terminal No.	Wire harness side
C8	1 GAUGE Fuse
	2 Body ECU
	3 Headlight Dimmer Relay
	4 Rear Fog Light Relay
	6 ECM
	8 Door Courtesy Switch
	11 IGN Fuse
	12 Alternator
	13 Oil Pressure Switch
	14 Fuel Filter Warning Switch
	15 Headlight Lamp
	16 ECM
	17 Skid Control ECU with Actuator (ABS)
	20 Ground (Signal Ground)
	21 ECU-B Fuse
	22 Flasher Relay
	23 Tail Fuse
	25 Driver Side Buckle Switch
	26 ECM
	27 Skid Control ECU with Actuator (ABS)
	28 4P-OUT
	29 ECM
	30 *1: A/C Control Amplifier
	*2: PTC Heater Amplifier
	31 Fuel Sender Gauge
	39 Ground (Fuel Ground)
	40 Power Ground

*1: Automatic A/C

*2: Manual A/C

Terminal No.	Wire harness side
C9	1 ECM (Shift indicator D)
	2 ECM (Shift indicator 2)
	3 ECM (Shift indicator L)
	4 Airbag Sensor Assy Center
	5 Skid Control ECU with Actuator (ABS)
	6 Brake Switch (Fluid Level)
	7 Transponder Key ECU
	8 Flasher Relay
	9 ECM (Shift indicator N)
	10 ECM (Shift indicator R)
	11 ECM (Shift indicator P)
	12 Door Courtesy Switch
	13 Engine Oil Level Sensor
	16 O/D Switch