

## HOW TO PROCEED WITH TROUBLESHOOTING

### NOTICE:

When DTCs other than U0073/94, U0123/62, U0124/95, and U0126/63 are output, inspect and repair the trouble areas indicated by the DTCs.

#### 1 CHECK CAN BUS LINE (SEE PAGE 05-1268)



#### 2 CHECK AND CLEAR DTCs

### HINT:

 
When checking the DTCs for the skid control ECU, See Pub. No. RM864E1, Page 05-293



#### 3 CHECK DTC COMBINATION TABLE (SEE PAGE 05-1267)




#### 4 CIRCUIT INSPECTION




#### 5 IDENTIFICATION OF PROBLEM


 
#### 6 REPAIR OR REPLACE



#### 7 CONFIRMATION TEST

 

END