


# MASS AIR FLOW METER (1AZ-FE/2AZ-FE)

## REPLACEMENT


10002-01

### 1. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL)

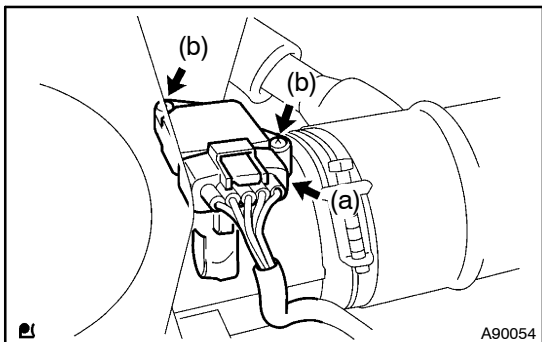

### 2. REMOVE MASS AIR FLOW METER

- (a) Disconnect the mass air flow meter connector.
- (b) Remove the 2 screws, then remove the mass air flow meter.

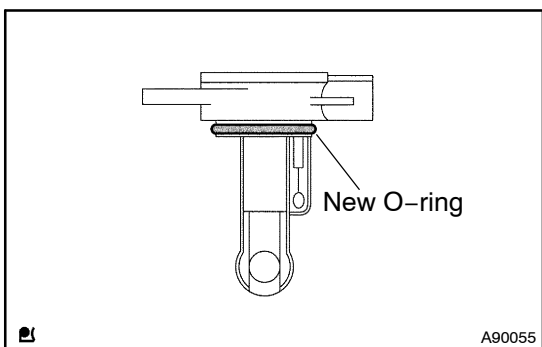

### 3. INSTALL MASS AIR FLOW METER

- (a) Install a new O-ring to the mass air flow meter.
- (b) Install the mass air flow meter with the 2 screws.

#### NOTICE:

**Be careful that the O-ring is not cracked or jammed when installing.**

- (c) Connect the mass air flow meter connector.

### 4. CONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL)

**Torque: 3.9 N·m (40 kgf·cm, 35 in·lbf)**