


REPLACEMENT

1. DISCHARGE FUEL SYSTEM PRESSURE (See page 11-1)
2. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL)
3. REMOVE FRONT WIPER ARM HEAD CAP (3 LINK TYPE FR WIPER)
4. REMOVE FR WIPER ARM LH (3 LINK TYPE FR WIPER) (See Pub. No. RM864E, page 66-9)
5. REMOVE COWL TOP VENTILATOR LOUVER CENTER NO.1 (4 LINK TYPE FR WIPER) (See Pub. No. RM864E, page 66-9)
6. REMOVE FR WIPER ARM LH (4 LINK TYPE FR WIPER) (See Pub. No. RM864E, page 66-9)
7. REMOVE FRONT WIPER ARM HEAD CAP
8. REMOVE FR WIPER ARM RH (See Pub. No. RM864E, page 66-9)
9. REMOVE COWL TOP VENTILATOR LOUVER SUB-ASSY (See Pub. No. RM864E, page 66-9)
10. REMOVE WIPER LINK ASSY (See Pub. No. RM864E, page 66-9)
11. REMOVE COWL TOP PANEL SUB-ASSY OUTER (See page 10-16)
12. REMOVE ENGINE COVER SUB-ASSY NO.1 (See page 10-16)
13. REMOVE AIR CLEANER CAP SUB-ASSY (See page 10-16)

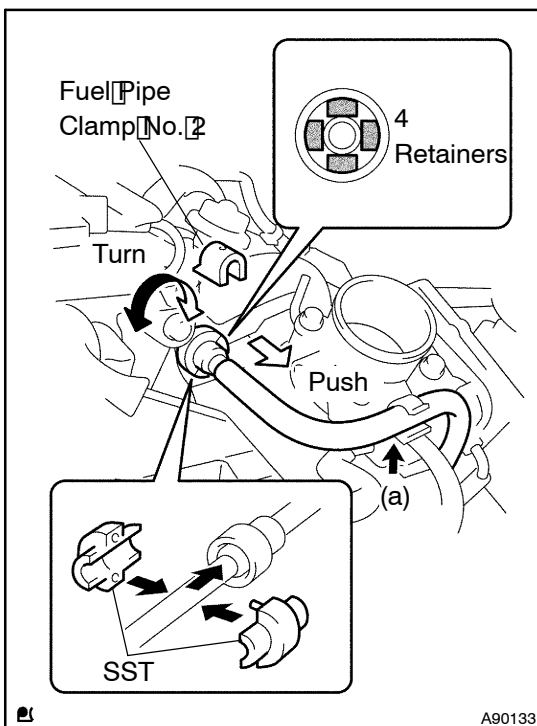

14. REMOVE FUEL DELIVERY PIPE SUB-ASSY


- (a) Remove the fuel tube from the fuel hose clamp.
- (b) Remove the fuel pipe clamp No. 2.
- (c) Using SST, disconnect the fuel tube from the fuel pressure pulsation damper.


SST 09268-21010

- (1) Assemble SST to the connection of the fuel tube as shown in the illustration.
- (2) Turn SST, then align the 4 retainers inside the connector with the chamfered parts of SST, then insert SST into the connector.
- (3) Push in SST and the connector together towards the fuel tube.


NOTICE:

- Remove dirt or foreign objects on the connector before this work.
- Do not allow any scratches or foreign objects on the parts when disconnecting as the connector has the O-ring that seals pipe
- Perform this work by SST. Do not use any tools.
- Do not forcibly bend, twist or turn the nylon tube.
- Protect the connected part by covering it with a vinyl bag after disconnecting the fuel tube.

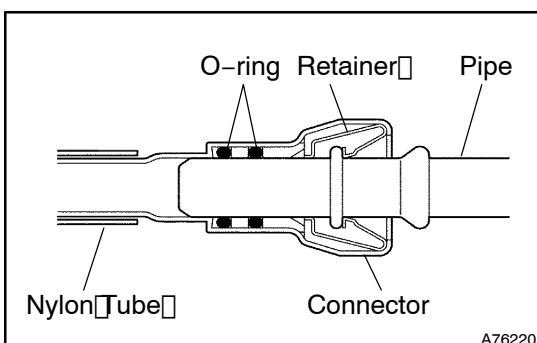


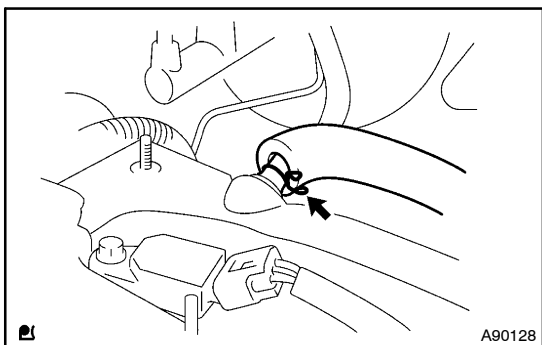

- (d) Disconnect the ventilation hose No. 2 from the ventilation valve.

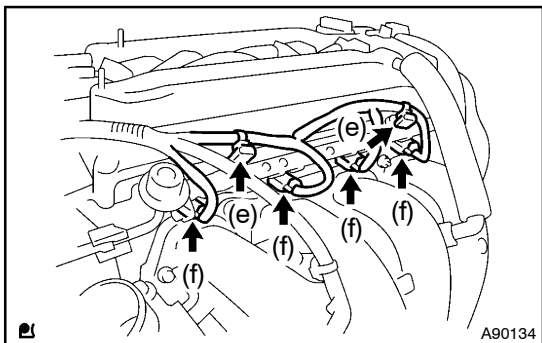


- (e) Remove the 2 wire harness clamps.
(f) Disconnect the 4 fuel injector connectors.

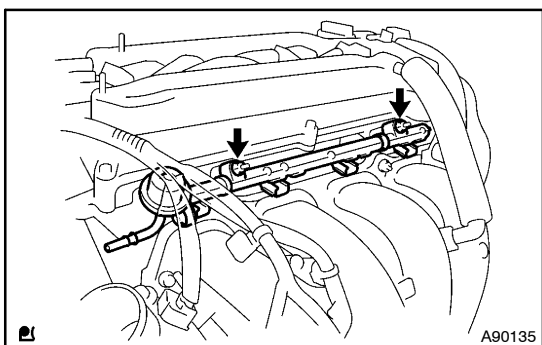


- (g) Remove the 2 bolts, then remove the fuel delivery pipe together with the 4 fuel injectors.

NOTICE:

Be careful not to drop the fuel injectors when removing the fuel delivery pipe.




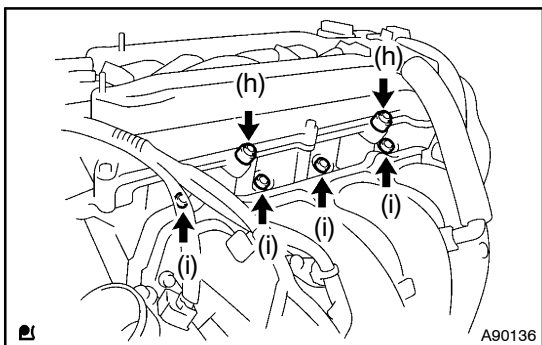


- (h) Remove the 2 delivery pipe spacers from the cylinder head.
(i) Remove the 4 insulators from the cylinder head.

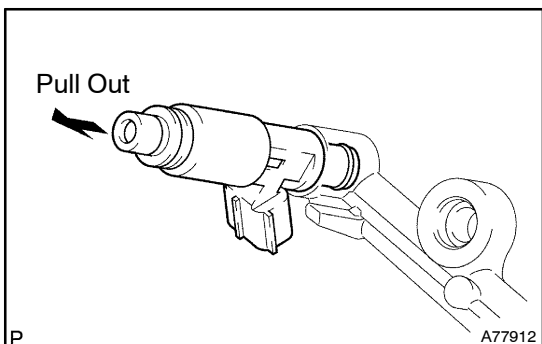

15. REMOVE FUEL INJECTOR ASSY

- (a) Pull out the 4 fuel injectors from the fuel delivery pipe.

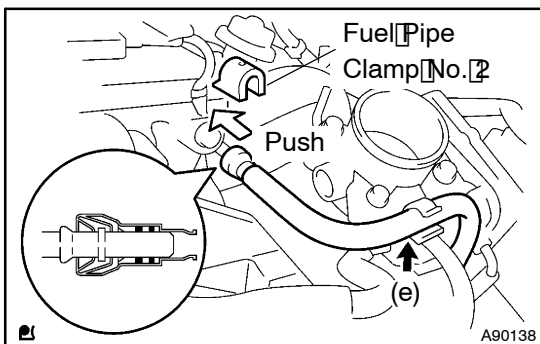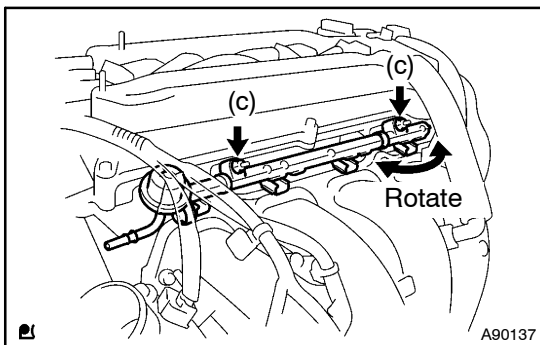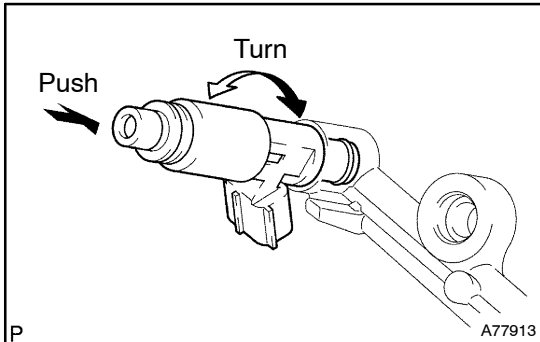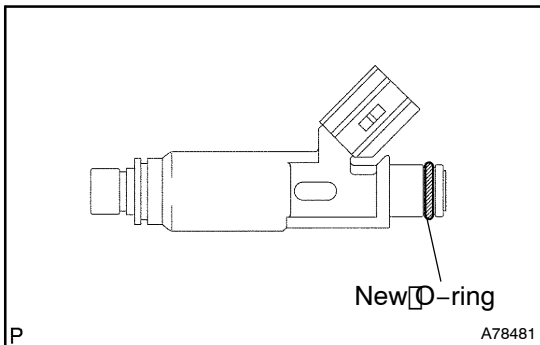

16. INSTALL FUEL INJECTOR ASSY

- Apply a light coat of gasoline or spindle oil to a new O-ring.
- Install the O-ring to each fuel injector.

- Apply a light coat of gasoline or spindle oil to the place where the fuel delivery pipe contacts the O-ring.
- Apply a light coat of gasoline or spindle oil to the O-ring again, then turn the fuel injector clockwise and counter-clockwise and push it to the fuel delivery pipe.

NOTICE:

Be careful that the O-ring is not cracked or jammed when installing.

- Check that the 4 fuel injectors rotate smoothly. If not, replace it with a new O-ring.

17. INSTALL FUEL DELIVERY PIPE SUB-ASSY

- Install the 4 new insulators to the cylinder head.
- Install the 2 delivery pipe spacers to the cylinder head.
- Install the fuel delivery pipe together with the 4 fuel injectors with the 2 bolts.

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

NOTICE:

Be careful not to drop the 4 fuel injectors when installing the fuel delivery pipe.

- Check that the 4 fuel injectors rotate smoothly. If not, replace it with a new O-ring.
- Connect the 4 fuel injector connectors.
- Install the 2 wire harness clamps.
- Connect the ventilation hose No. 2 to the ventilation valve.
- Connect the fuel tube to the fuel pressure pulsation damper.
 - Push in the connector to the pipe until the connector makes a "click" sound.

NOTICE:

- Check that there are no scratches or foreign objects around the connected part of the connector and pipe before this work.
 - After connecting the fuel tube, check that the connector and pipe are securely connected by pulling them.
- Install the fuel pipe clamp No. 2.
 - Install the fuel tube to the fuel hose clamp.

18. INSTALL AIR CLEANER CAP SUB-ASSY

19. INSTALL COWL TOP PANEL SUB-ASSY OUTER (See page 10-16)

20. INSTALL WIPER LINK ASSY (See Pub. No. RM864E, page 66-9)

AVENSIS VERSO/PICNIC Supplement (RM1032E)

21. CONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL)
Torque: 3.9 N·m (40 kgf·cm, 35 in. lbf)
22. CHECK FOR FUEL LEAKS (See page 1-5)
23. INSTALL ENGINE COVER SUB-ASSY NO.1 (See page 10-16)
24. INSTALL COWL TOP VENTILATOR LOUVER SUB-ASSY
25. INSTALL FR WIPER ARM RH (See Pub. No. RM864E, page 66-9)
26. INSTALL FRONT WIPER ARM HEAD CAP
27. INSTALL FR WIPER ARM LH (3 LINK TYPE FR WIPER) (See Pub. No. RM864E, page 66-9)
28. INSTALL FRONT WIPER ARM HEAD CAP (3 LINK TYPE FR WIPER)
29. INSTALL FR WIPER ARM LH (4 LINK TYPE FR WIPER) (See Pub. No. RM864E, page 66-9)
30. INSTALL COWL TOP VENTILATOR LOUVER CENTER NO.1 (4 LINK TYPE FR WIPER)