


AIR FUEL RATIO SENSOR (1AZ-FE)

REPLACEMENT

120EH-01

1. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL)

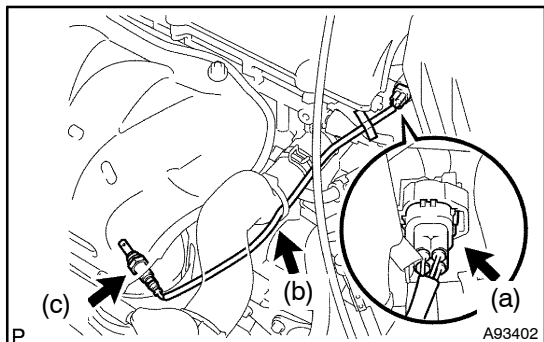

2. REMOVE AIR FUEL RATIO SENSOR

- (a) Disconnect the connector.
- (b) Disconnect the wire harness from the case clamp.
- (c) Remove the air fuel ratio sensor.

3. INSTALL AIR FUEL RATIO SENSOR

Torque: 44 N·m (449 kgf·cm, 32 ft·lbf)

4. INSTALL ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL)

Torque: 3.9 N·m (40 kgf·cm, 35 in·lbf)