


ENGINE REAR OIL SEAL (2AZ-FE)

REPLACEMENT

1. REMOVE AUTOMATIC TRANSAXLE ASSY (See Pub. No. RM864E, page 40-7)

2. REMOVE DRIVE PLATE & RING GEAR SUB-ASSY (See page 14-22)

SST 09213-54015 (91651-60855), 09330-00021

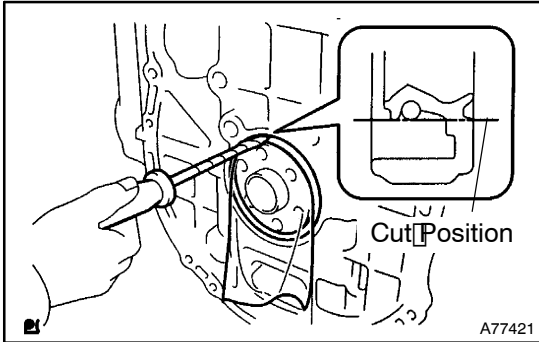


3. REMOVE ENGINE REAR OIL SEAL

(a) Using a knife, cut off the engine rear oil seal lip.

(b) Using a screwdriver with the tip wrapped in tape, pry out the engine rear oil seal.

HINT:

After the removal, check that the crankshaft is not damaged. If damaged, smooth the surface with 400-grit sandpaper.

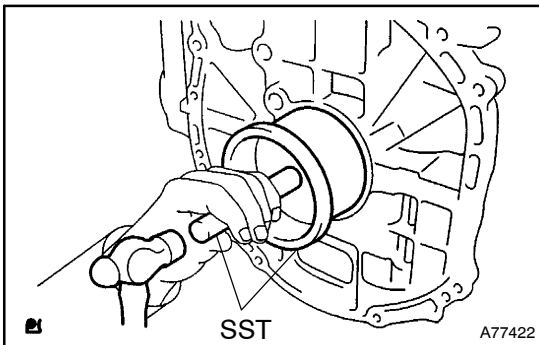

4. INSTALL ENGINE REAR OIL SEAL

(a) Apply multipurpose grease to a new engine rear oil seal lip.

NOTICE:

Keep the lip off foreign materials.

(b) Using SST and a hammer, tap in the engine rear oil seal until its surface is flush with the engine rear oil seal retainer edge.

SST 09223-15030, 09950-70010 (09951-07100)

NOTICE:

Wipe off extra grease on the crankshaft.

5. INSTALL DRIVE PLATE & RING GEAR SUB-ASSY (See page 14-22)

SST 09213-54015 (91651-60855), 09330-00021

6. INSTALL AUTOMATIC TRANSAXLE ASSY (See Pub. No. RM864E, page 40-7)