


THERMOSTAT(2AZ-FE)

1606J-02

REPLACEMENT


1. DRAIN ENGINE COOLANT (See page 16-7)
2. REMOVE FAN AND GENERATOR V-BELT (See page 14-5)
SST 09249-63010
3. REMOVE GENERATOR ASSY (See page 19-15)

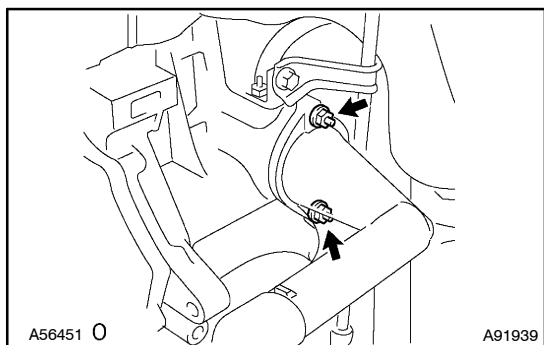

4. REMOVE WATER INLET

- (a) Remove the 2 nuts, then disconnect the water inlet from the cylinder block.

5. REMOVE THERMOSTAT

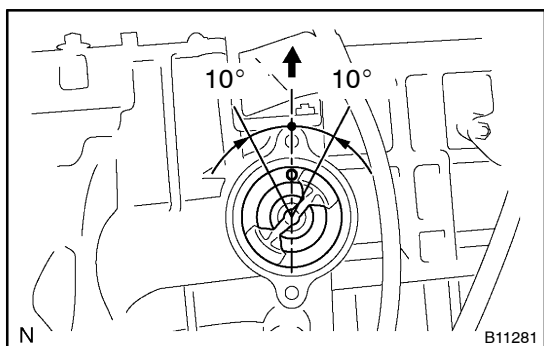

6. INSTALL THERMOSTAT

- (a) Install a new gasket to the thermostat.
- (b) Install the thermostat with the jiggle valve upward.

HINT:

The jiggle valve may be set within 10° on either side of the prescribed position.

7. INSTALL WATER INLET

- (a) Install the water inlet with the 2 nuts.

Torque: 9.0 N·m (92 kgf·cm, 80 in. lbf)

8. INSTALL GENERATOR ASSY (See page 19-15)
9. INSTALL FAN AND GENERATOR V-BELT (See page 14-5)
SST 09249-63010
10. ADD ENGINE COOLANT (See page 16-7)
11. CHECK FOR ENGINE COOLANT LEAKS (See page 16-7)