


# IGNITION COIL ASSY (1AZ-FE/2AZ-FE)

## REPLACEMENT


180C9-01

### 1. DISCONNECT ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL)

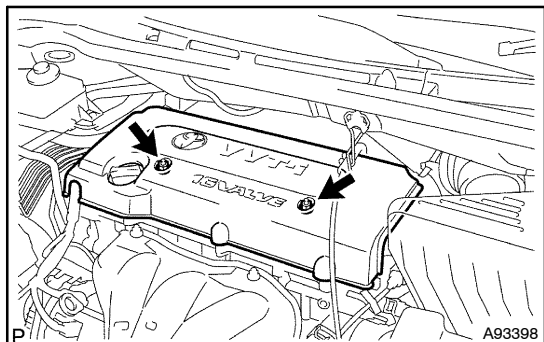

### 2. REMOVE ENGINE COVER SUB-ASSY NO.1

- (a) Remove the 2 bolts and engine cover sub-assembly.

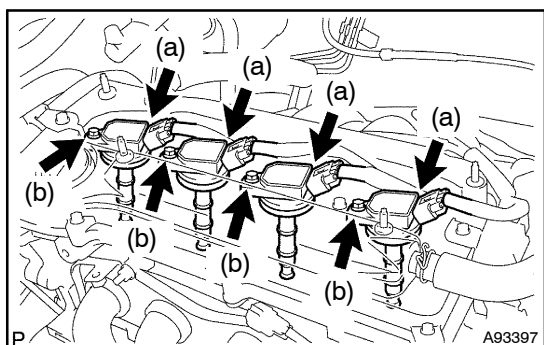

### 3. REMOVE IGNITION COIL ASSY

- (a) Disconnect the 4 ignition coil connectors.  
(b) Remove the 4 bolts and 4 ignition coils.

### 4. INSTALL IGNITION COIL ASSY

Torque: 9.0 N·m (92 kgf·cm, 80 in. lbf)

### 5. INSTALL ENGINE COVER SUB-ASSY NO.1

Torque: 9.0 N·m (92 kgf·cm, 80 in. lbf)

### 6. INSTALL ENGINE WIRE NO.3 (BATTERY NEGATIVE TERMINAL) (See page 12-8)