

## CHARGING SYSTEM (1AZ-FE)

190XE-01

### PRECAUTION

1. Check that the battery cables are connected to the correct terminals.
2. Disconnect the battery cables if a quick charge is given to the battery.
3. Do not perform tests with a high voltage insulation resistance tester.
4. Never disconnect the battery while the engine is running.
5. Check that the charging cable is tightened on terminal B of the generator and the fuse box.
6. Do not check whether the alternator generates current or not with terminal F connected to the other terminals.