


YAWRATE SENSOR REPLACEMENT


3217A-02

1. REMOVE FRONT SEAT ASSY RH (See Pub. No. RM864E, page 76-23)
2. REMOVE FRONT DOOR SCUFF PLATE RH (See Pub. No. RM864E, page 76-23)
3. REMOVE COWL SIDE TRIM BOARD LH (See Pub. No. RM864E, page 76-23)
4. REMOVE FRONT FLOOR FOOTREST

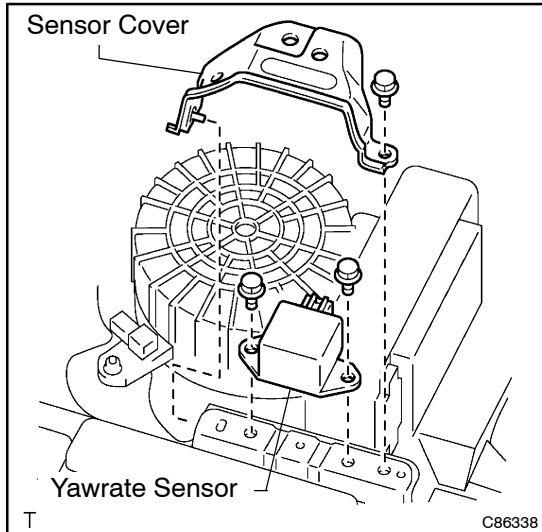

5. REMOVE YAWRATE SENSOR

- (a) Turn up the floor carpet.
- (b) Disconnect the yawrate sensor connector.
- (c) Remove the bolt and yawrate sensor cover.
- (d) Remove the 2 bolts and yawrate sensor.

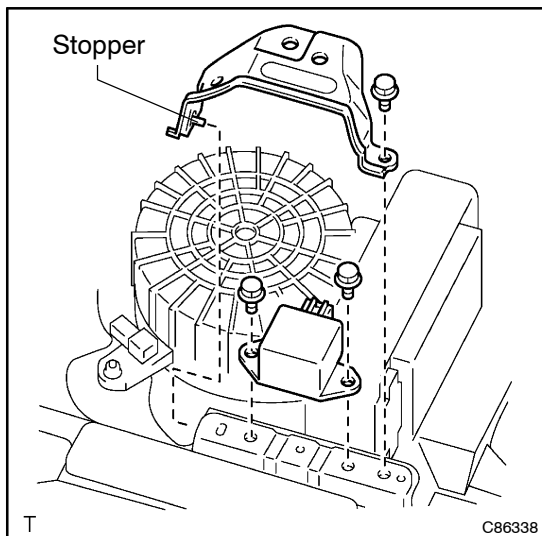

6. INSTALL YAWRATE SENSOR

- (a) Install the yawrate sensor with the 2 bolts.
Torque: 13 N·m (136 kgf·cm, 10 ft·lbf)

NOTICE:

- Do not use the dropped or damaged yawrate sensor.
- Clear any foreign matter between the yawrate sensor bracket and body.
- Make sure the sensor direction.

- (b) Install the yawrate sensor cover with the bolt.

NOTICE:

Install the stopper securely.

- (c) Connect the yawrate sensor connector.
- (d) Install the floor carpet.

7. INSTALL FRONT FLOOR FOOTREST
8. INSTALL COWL SIDE TRIM BOARD LH (See Pub. No. RM864E, page 76-23)
9. INSTALL FRONT DOOR SCUFF PLATE RH (See Pub. No. RM864E, page 76-23)
10. INSTALL FRONT SEAT ASSY RH (See Pub. No. RM864E, page 76-23)
11. PERFORM YAWRATE SENSOR ZERO POINT CALIBRATION
12. CHECK VSC SENSOR SIGNAL