


STEERING SENSOR REPLACEMENT


3217B-01

1. PRECAUTION (SEE PAGE 60-1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)
3. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
4. REMOVE HORN BUTTON ASSY (SEE PAGE 60-15)
5. REMOVE STEERING WHEEL ASSY (See Pub. No. RM864E, page 50-6)
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
6. REMOVE STEERING COLUMN LOWER COVER (See Pub. No. RM864E, page 50-6)
7. REMOVE SPIRAL CABLE SUB-ASSY (SEE PAGE 60-24)

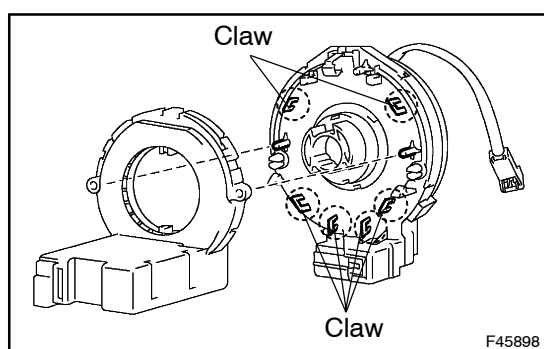

8. REMOVE STEERING SENSOR

- (a) Release 6 claw fittings and remove the steering sensor from the spiral cable.

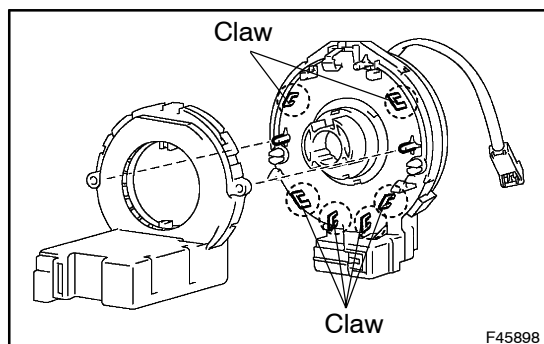

9. INSTALL STEERING SENSOR

- (a) Install the steering sensor to the spiral cable.

NOTICE:

- Install the claws securely.
- Do not damage the claws.

10. ADJUST CENTER FRONT WHEEL (SEE PAGE 60-24)
11. INSTALL SPIRAL CABLE SUB-ASSY (SEE PAGE 60-24)
12. CENTER SPIRAL CABLE (SEE PAGE 60-24)
13. INSTALL STEERING WHEEL ASSY (See Pub. No. RM864E, page 50-6)
14. INSPECT STEERING WHEEL CENTER POINT
15. INSTALL HORN BUTTON ASSY (SEE PAGE 60-15)
16. CONNECT BATTERY NEGATIVE TERMINAL
17. INSPECT SRS WARNING LIGHT (SEE PAGE 05-972)