


SPIRAL CABLE SUB-ASSY REPLACEMENT

HINT:

- COMPONENTS: See page 60-14.
- 1. PRECAUTION (SEE PAGE 60-1)
- 2. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)
- 3. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
- 4. REMOVE STEERING WHEEL COVER LOWER NO.2 (SEE PAGE 60-15)
- 5. REMOVE STEERING WHEEL COVER LOWER NO.3 (SEE PAGE 60-15)
- 6. REMOVE HORN BUTTON ASSY (SEE PAGE 60-15)
- 7. REMOVE STEERING WHEEL ASSY (SEE PUB. No. RM864E, PAGE 50-6)
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)
- 8. REMOVE STEERING COLUMN COVER LOWER (SEE PUB. No. RM864E, PAGE 50-6)
- 9. REMOVE STEERING COLUMN COVER UPPER (SEE PUB. No. RM864E, PAGE 50-6)

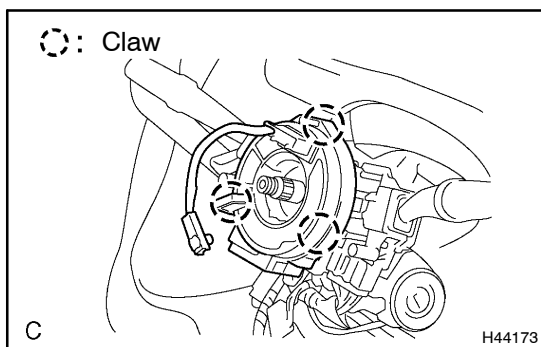

- 10. REMOVE SPIRAL CABLE SUB-ASSY
 - (a) Disconnect the connectors from the spiral cable sub-assy.
- NOTICE:**
When handling the airbag connector, take care not to damage the airbag wire harness.
- (b) Release the 3 claws and remove the spiral cable sub-assy.

- 11. INSPECT SPIRAL CABLE SUB-ASSY
 - (a) If any of the following conditions occur, replace the spiral cable sub-assy with a new one.

Condition:

Scratches or cracks on the connector

Cracks, dents or chips in the spiral cable sub-assy

- 12. INSTALL SPIRAL CABLE SUB-ASSY
 - (a) Check that the front wheels are facing straight ahead.
 - (b) Set the turn signal switch to the neutral position.

NOTICE:

Make sure that the turn signal switch is in the neutral position or the pin of the turn signal switch may be snapped.

- (c) Install the spiral cable sub-assy.

NOTICE:

When replacing the spiral cable sub-assy with a new one, remove the lock pin before installing the steering wheel assy.

- (d) Connect the connectors to the spiral cable sub-assy.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.


- 13. INSTALL STEERING COLUMN COVER UPPER (SEE PUB. No. RM864E, PAGE 50-6)
- 14. INSTALL STEERING COLUMN COVER LOWER (SEE PUB. No. RM864E, PAGE 50-6)

15. ADJUST SPIRAL CABLE SUB-ASSY


- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

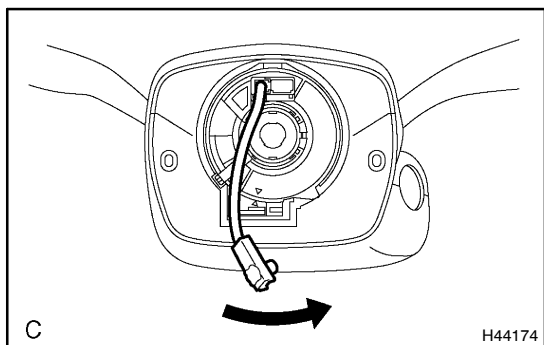

- (c) Turn the spiral cable sub-assy counterclockwise slowly by hand until it feels firm.

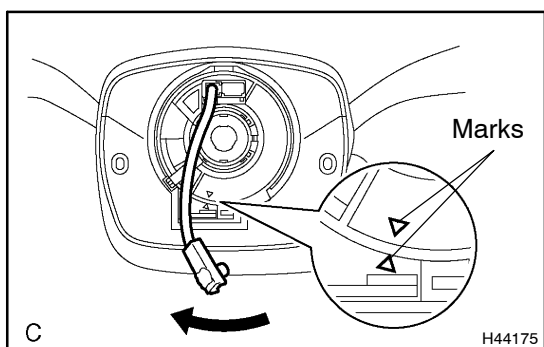

- (d) Rotate the spiral cable sub-assy clockwise approximately 2.5 turns to align the marks.

HINT:

The spiral cable sub-assy will rotate approximately 2.5 turns to both left and right from the center.

16. INSTALL STEERING WHEEL ASSY (SEE PUB. No. RM864E, PAGE 50-6)

17. INSPECT STEERING WHEEL CENTER POINT

18. INSTALL HORN BUTTON ASSY (SEE PAGE 60-15)

19. CONNECT BATTERY NEGATIVE TERMINAL

20. INSPECT HORN BUTTON ASSY (SEE PAGE 60-10)

21. INSPECT SRS WARNING LIGHT (SEE PAGE 05-972)