


## REPLACEMENT

1. PRECAUTION (SEE PAGE 60-1)
2. DISCONNECT BATTERY NEGATIVE TERMINAL (SEE PAGE 60-1)
3. REMOVE BATTERY
4. SEPARATE FRONT FENDER LINER RH (1AZ-FE ENGINE TYPE) (SEE PUB. No. RM864E, PAGE 76-2)
5. SEPARATE FRONT FENDER LINER LH (1AZ-FE ENGINE TYPE) (SEE PUB. No. RM864E, PAGE 76-2)
6. REMOVE ENGINE UNDER COVER RH (1AZ-FE ENGINE TYPE) (SEE PUB. No. RM864E, PAGE 76-2)
7. REMOVE ENGINE UNDER COVER LH (1AZ-FE ENGINE TYPE) (SEE PUB. No. RM864E, PAGE 76-2)
8. REMOVE FRONT BUMPER COVER (1AZ-FE ENGINE TYPE) (SEE PUB. No. RM864E, PAGE 76-2)
9. REMOVE HEADLAMP UNIT ASSY LH (1AZ-FE ENGINE TYPE) (SEE PAGE 65-3)
10. REMOVE AIR CLEANER DUCT (1AZ-FE ENGINE TYPE)
11. REMOVE AIR CLEANER ASSY (1AZ-FE ENGINE TYPE)

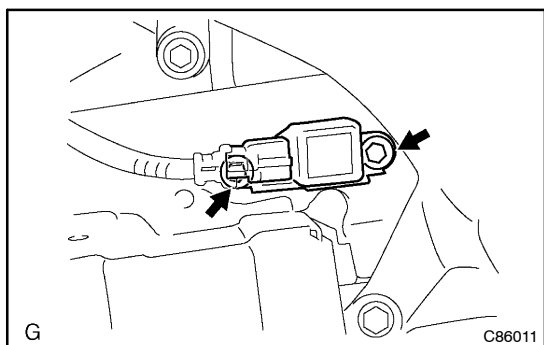

### 12. REMOVE AIR BAG SENSOR FRONT LH

- (a) Disconnect the connector from the airbag sensor front LH.
- (b) Remove the 2 bolts and the airbag sensor front LH.

### 13. INSTALL AIR BAG SENSOR FRONT LH

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

#### CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the airbag sensor front LH with the 2 bolts.

Torque: 9.0 N·m (92 kgf·cm, 80 in. lbf)

#### NOTICE:

- If the airbag sensor front LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
  - When installing the airbag sensor front LH, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Check that there is no looseness in the installation parts of the airbag sensor front LH.
  - (e) Connect the connector to the airbag sensor front LH.

### 14. CONNECT BATTERY NEGATIVE TERMINAL

### 15. INSPECT SRS WARNING LIGHT (SEE PAGE 05-972)

### 16. VEHICLE PREPARATION FOR HEADLAMP AIM ADJUSTMENT (SEE PAGE 65-7)

### 17. PREPARATION FOR HEADLAMP AIMING (Using a screen) (SEE PAGE 65-7)

### 18. HEADLAMP AIMING INSPECTION (SEE PAGE 65-7)

### 19. HEADLAMP AIMING ADJUSTMENT (SEE PAGE 65-7)