


# AIR BAG FRONT RH SENSOR REPLACEMENT

60063-02

HINT:

COMPONENTS: [See page 60-26](#)

1. PRECAUTION ([SEE PAGE 60-1](#))
2. DISCONNECT BATTERY NEGATIVE TERMINAL ([SEE PAGE 60-1](#))

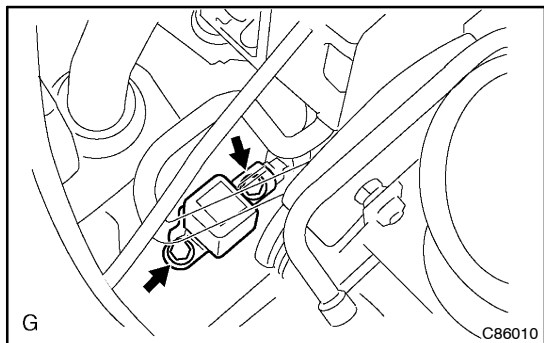

## 3. REMOVE AIR BAG FRONT RH SENSOR

- (a) Disconnect the connector from the airbag front RH sensor.
- (b) Remove the 2 bolts and the airbag front RH sensor.

## 4. INSTALL AIR BAG FRONT RH SENSOR

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

### CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Install the airbag front RH sensor with the 2 bolts.

Torque: 9.0 N·m (92 kgf·cm, 80 in. lbf)

### NOTICE:

- If the airbag front RH sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
  - When installing the airbag front RH sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Check that there is no looseness in the installation parts of the airbag front RH sensor.
  - (e) Connect the connector to the airbag front RH sensor.

## 5. CONNECT BATTERY NEGATIVE TERMINAL

6. INSPECT SRS WARNING LIGHT ([SEE PAGE 05-972](#))