


FOG LAMP LAMP UNIT LH REPLACEMENT

6515T-01

HINT:


- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- Installation is in the reverse order of removal.

1. REMOVE FRONT BUMPER (SEE PAGE 76-2)

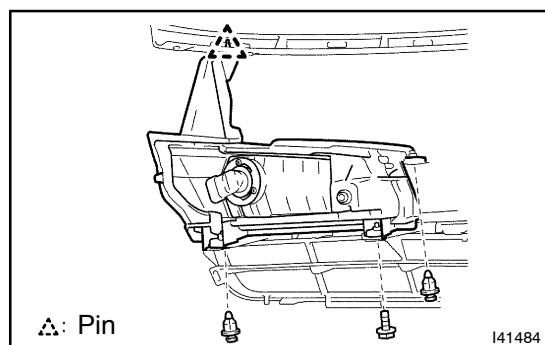

2. REMOVE FOG LAMP ASSY LH w/ BRACKET

- (a) Remove the bolt and the 2 clips.
- (b) Remove the pin and remove the fog lamp assy LH w/ bracket from the front bumper cover.

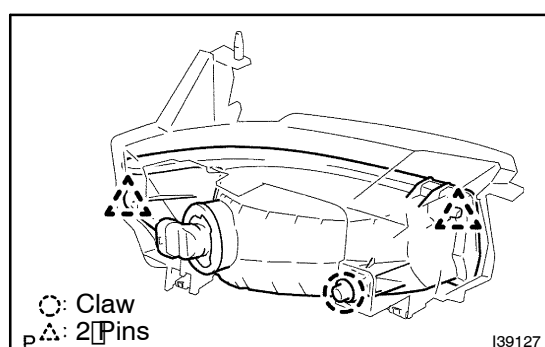

3. REMOVE FOG LAMP ASSY LH

- (a) Disengage the claw, remove the 2 pins, and remove the fog lamp assy LH from the fog lamp assy LH w/ bracket.

4. REMOVE FOG LAMP BRACKET LH

5. REMOVE FOG LAMP BULB

- (a) Remove the fog lamp bulb.

6. REMOVE FOG LAMP LAMP UNIT LH

7. VEHICLE PREPARATION FOR FOG LAMP AIM ADJUSTMENT (SEE PAGE 65-12)

8. PREPARATION FOR FOG LAMP AIMING (SEE PAGE 65-12)

9. FOG LAMP AIMING INSPECTION (SEE PAGE 65-12)

10. FOG LAMP AIMING ADJUSTMENT (SEE PAGE 65-12)