

COMBINATION METER

PROBLEM SYMPTOMS TABLE

7103Y-02

INDICATOR LIGHTS (Except Australia):

Symptom	Suspected Area	See page
VSC indicator light does not come on.	1. Wire Harness or Connector 2. Skid Control ECU 3. Combination Meter Assy	– 05-606 ★
TRC OFF indicator light does not come on.	1. TRC OFF Switch 2. Wire Harness or Connector 3. Skid Control ECU 4. Combination Meter Assy	– – 05-606 ★
SLIP indicator light does not come on.	1. Wire Harness or Connector 2. Skid Control ECU 3. Combination Meter Assy	– 05-606 ★
TAIL indicator light does not come on.	1. Wire Harness or Connector 2. Combination Meter Assy	– ★

INDICATOR LIGHTS (Australia):

Symptom	Suspected Area	See page
CRUISE indicator light does not come on.	1. Wire Harness or Connector 2. ECM 3. Combination Meter Assy	– 05-1311 ★

★: See Pub. No. RM864E