


REPLACEMENT


HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).

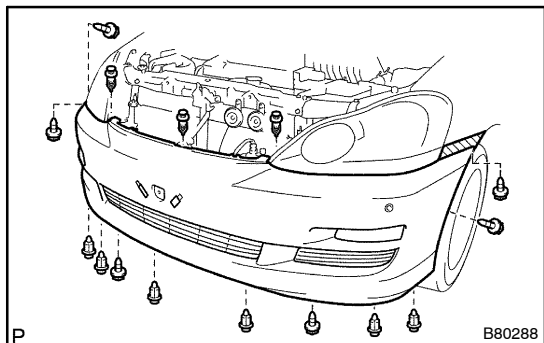

1. REMOVE FRONT BUMPER COVER


- (a) Put protective tape under the front fender.
- (b) Remove the 6 bolts and 9 clips.
- (c) w/ Headlamp cleaner:
Disconnect the cleaner hose.

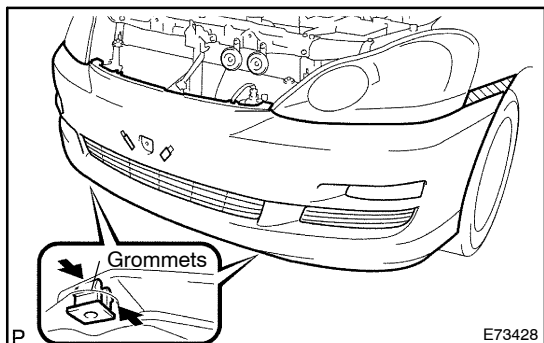

- (d) Using a screwdriver, remove the 2 grommets.

HINT:


Tape the screwdriver tip before use.

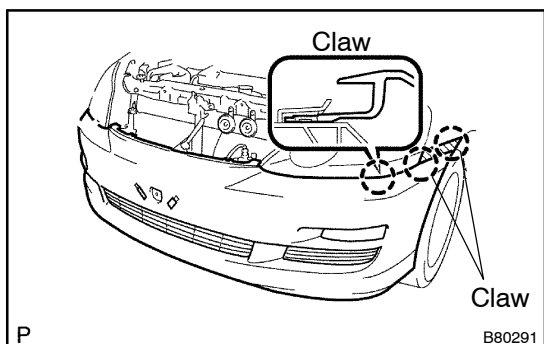

- (e) Using a screwdriver, disengage the 6 claws and remove the bumper.

HINT:


Tape the screwdriver tip before use.

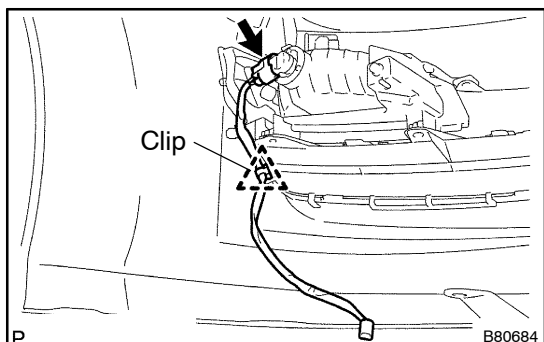

2. REMOVE FOG LAMP CORD

- (a) w/ Fog lamp:
Disconnect the 2 fog lamp connectors.
- (b) Remove the clip and lamp cord.

3. REMOVE FOG LAMP ASSY LH W/BRACKET (W/ FOG LIGHT)
4. REMOVE FOG LAMP ASSY RH W/BRACKET (W/ FOG LIGHT)

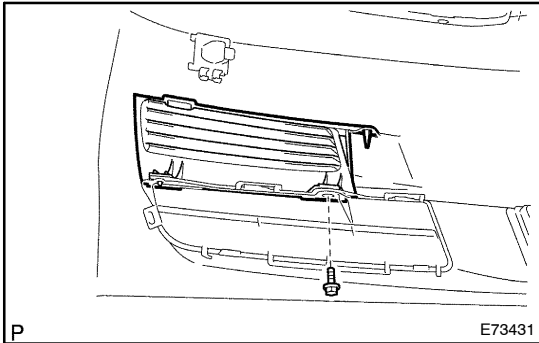


5. REMOVE FRONT BUMPER HOLE COVER LH (W/O FOG LIGHT)
 - (a) Remove the bolt and hole cover.

6. REMOVE FRONT BUMPER HOLE COVER RH (W/O FOG LIGHT)

HINT:

Use the same procedures described for the LH side.

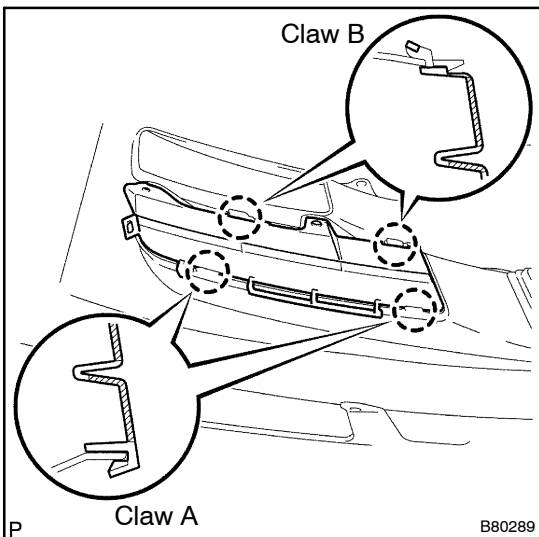

7. REMOVE RADIATOR GRILLE LWR LH
 - (a) Using a screwdriver, disengage the 2 claws labeled A and 2 claws labeled B, and remove the grille lower.

HINT:

Tape the screwdriver tip before use.


8. REMOVE RADIATOR GRILLE LWR RH

HINT:

Use the same procedures described for the LH side.

9. REMOVE HEADLAMP WASHER ACTUATOR SUB-ASSY (W/ HEADLAMP CLEANER)

- (a) Using a screwdriver, remove the 2 clamps and 2 actuators.

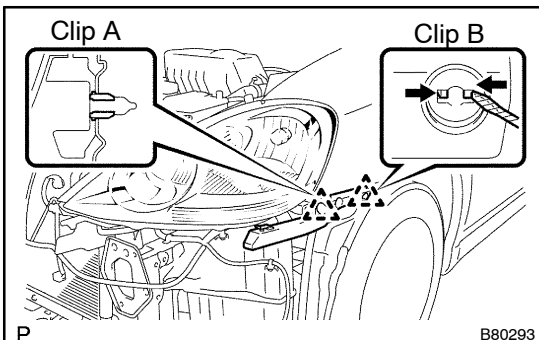

10. REMOVE FRONT BUMPER SIDE SUPPORT LH

- (a) Remove the screw.
- (b) Using a screwdriver, disengage the clip labeled A and clip labeled B, and remove the side support.


HINT:

Tape the screwdriver tip before use.

11. REMOVE FRONT BUMPER SIDE SUPPORT RH

HINT:

Use the same procedures described for the LH side.

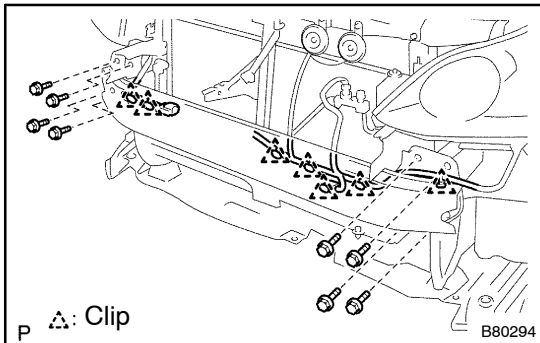12. REMOVE FRONT BUMPER ENERGY ABSORBER**13. REMOVE FRONT BUMPER REINFORCEMENT SUB-ASSY**

- (a) Using a clip remover, remove the 7 clips and wire harness.
- (b) Remove the 8 bolts and reinforcement.

14. INSTALL FRONT BUMPER REINFORCEMENT SUB-ASSY

- (a) Install the reinforcement with the 8 bolts.

Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)