


FORWARD CLUTCH ASSY (U241E)

OVERHAUL

4006Q-01

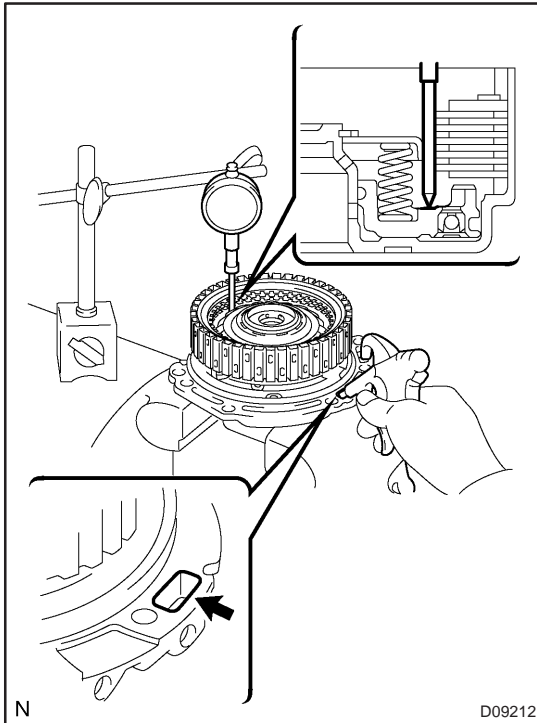

1. INSPECT PACK CLEARANCE OF FORWARD CLUTCH

- (a) Install the forward clutch on the oil pump.

NOTICE:

Be careful not to damage the oil seal ring of oil pump.

- (b) Using a dial indicator, measure the forward clutch piston stroke while applying and releasing compressed air (392 kPa, 4.0 kgf/cm², 57 psi).

Piston stroke: 1.74 – 2.08 mm (0.0685 – 0.0819 in.)

If the piston stroke is less than the minimum, parts may have been assembled incorrectly. Check and reassemble again.


If the clearance is non-standard, select another flange.

HINT:

There are 5 different flanges in thickness.


Flange thickness: mm (in.)

No.	Thickness	No.	Thickness
1	3.00 (0.1181)	4	3.45 (0.1358)
2	3.15 (0.1240)	5	3.60 (0.1417)
3	3.30 (0.1299)	—	—

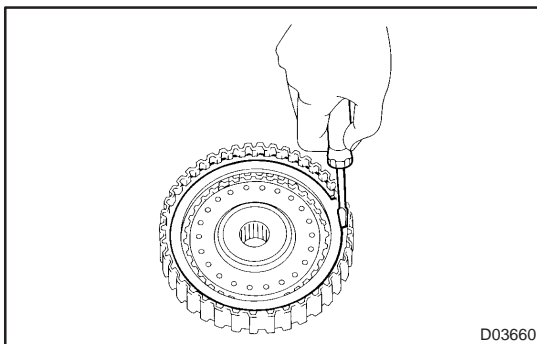


2. REMOVE FORWARD MULTIPLE DISC CLUTCH CLUTCH DISC

- (a) Using a screwdriver, remove the snap ring.

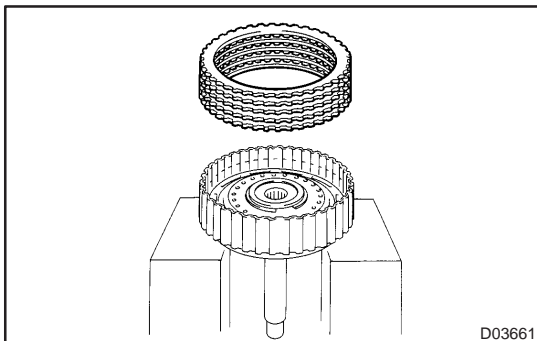

- (b) Remove the flange, 5 discs and 5 plates.

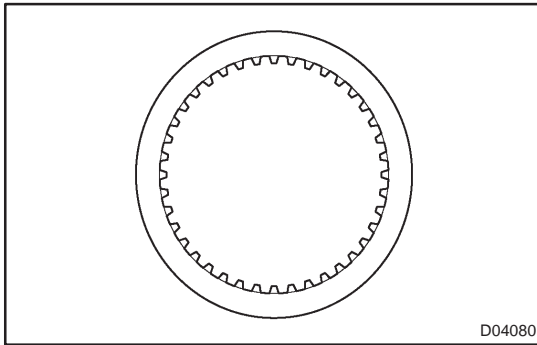


3. INSPECT FORWARD MULTIPLE DISC CLUTCH CLUTCH DISC

- (a) Check to see if the sliding surface of the disc, plate and flange are worn or burnt.

If necessary, replace them.

HINT:

- If the lining of the disc is peeling off or discolored, or even if replace all discs.
- Before assembling new discs, soak them in ATF for at least 15 minutes.

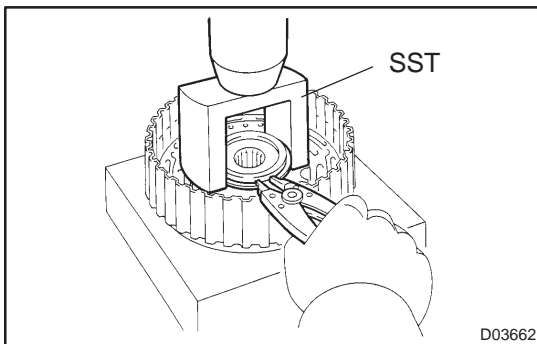


4. REMOVE FORWARD CLUTCH RETURN SPRING SUB-ASSY


- (a) Place SST on the spring retainer and compress the return spring with a press.

SST 09350-32014 (09351-32070)

- (b) Using a snap ring expander, remove the snap ring.

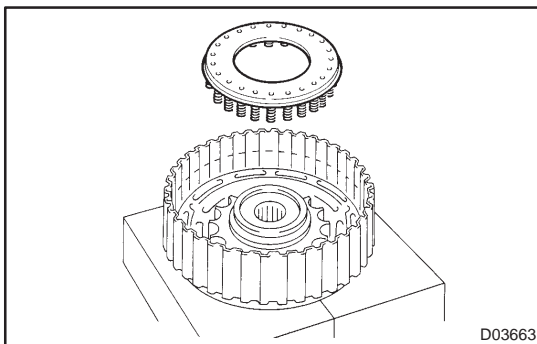


- (c) Remove the piston return spring.

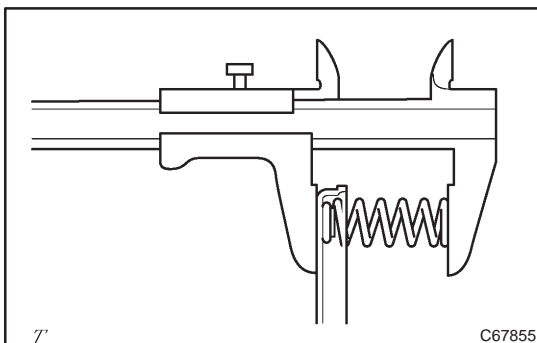

5. INSPECT FORWARD CLUTCH RETURN SPRING SUB-ASSY

- (a) Using a vernier calipers, measure the free length of the spring together with the spring seat.

Standard free length: 28.23 mm (1.1114 in.)

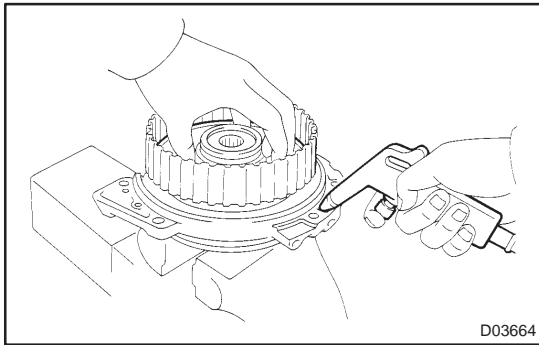

6. REMOVE FORWARD CLUTCH PISTON SUB-ASSY


- Place the forward clutch drum onto the oil pump.
- Holding the forward clutch piston with your hand, apply compressed air (392 kPa, 4.0 kgf/cm², 57 psi) to the oil pump to remove the forward clutch piston.

HINT:

When the piston can not be removed as it is slanted, either blow the air again with the protruding side pushed or remove the piston using the needle nose plier with vinyl tape on the tip.


7. REMOVE FORWARD CLUTCH PISTON O-RING

- Remove the 2 O-rings.

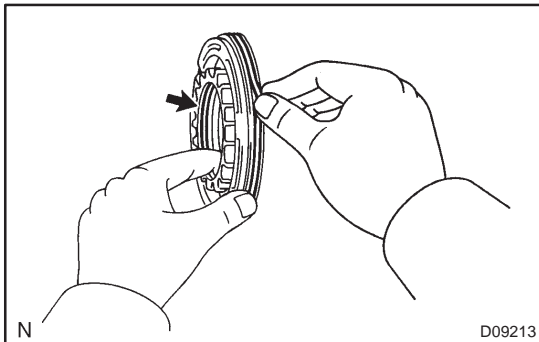


8. INSPECT FORWARD CLUTCH PISTON SUB-ASSY


- Shake the piston to check that the check ball is not stuck.

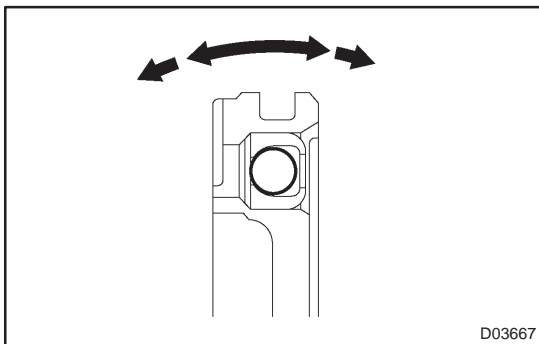


- Check that the valve does not leak when applying low compressed air (392 kPa, 4.0 kgf/cm², 57 psi).

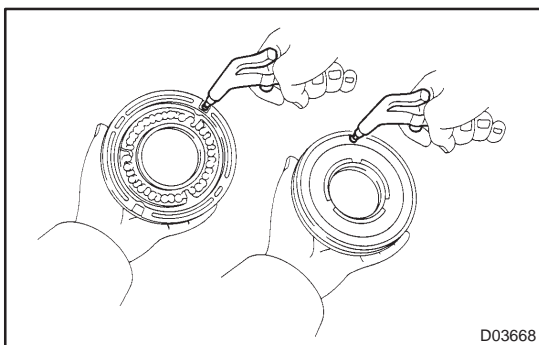

9. REMOVE INPUT SHAFT OIL SEAL RING

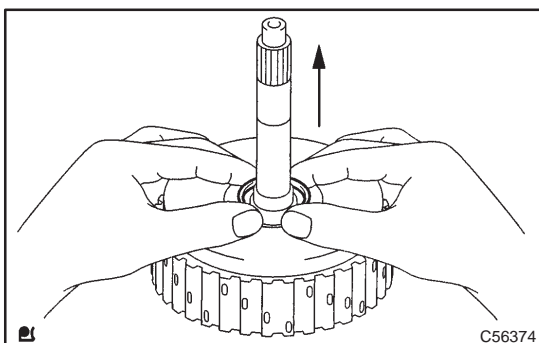

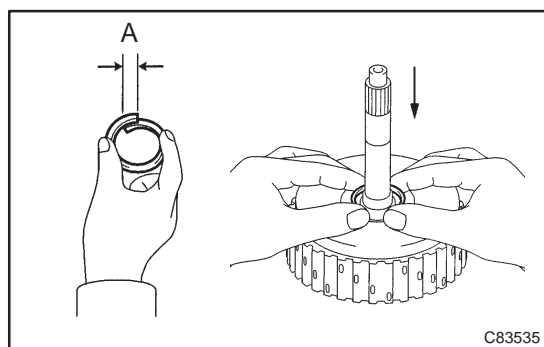


10. INSTALL INPUT SHAFT OIL SEAL RING

- (a) Compress the oil seal ring from both sides to reduce dimension A.

Dimension A:


5.0 mm (0.197 in.)

- (b) Coat the oil seal ring with ATF and install it to the input shaft.

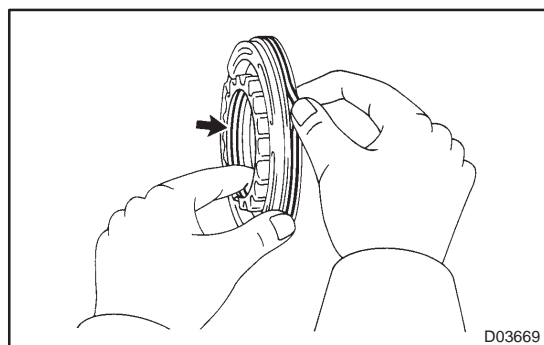


11. INSTALL FORWARD CLUTCH PISTON O-RING

- (a) Coat 2 new O-rings with ATF, install them to the forward clutch piston.

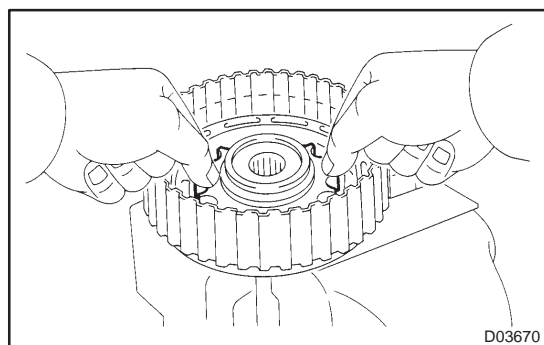


12. INSTALL FORWARD CLUTCH PISTON SUB-ASSY

- (a) Install the forward clutch piston sub-assy to the forward clutch drum.

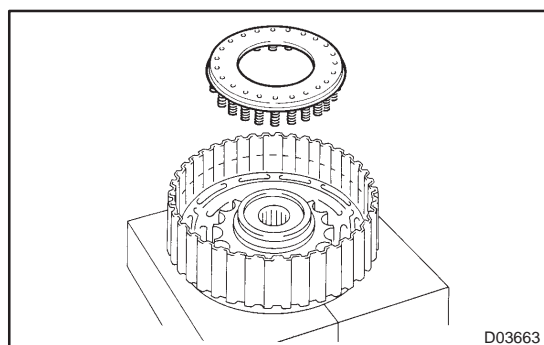

13. INSTALL FORWARD CLUTCH RETURN SPRING SUB-ASSY

- (a) Place the forward clutch return spring sub-assy onto the forward clutch piston.

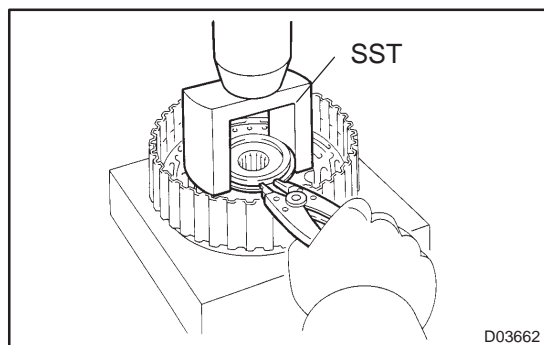

- (b) Place SST on the return spring, and compress the return spring with a press.


SST 09350-32014 (09351-32070)

- (c) Install the snap ring with a snap ring expander. Be sure the end gap of the snap ring is not aligned with the spring retainer claw.

NOTICE:


- Stop the press when the spring sheet is lowered to the place 1 – 2 mm (0.039 – 0.078 in.) from the snap ring groove.

- This prevents the spring sheet from being deformed.
- Do not expand the snap ring excessively.

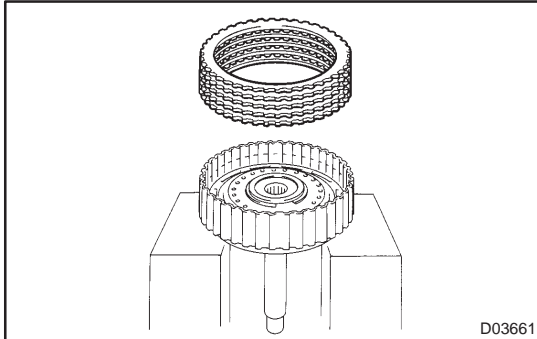


14. INSTALL FORWARD CLUTCH FLANGE HOLE SNAP RING

- (a) Install the 5 plates, 5 discs and a flange.

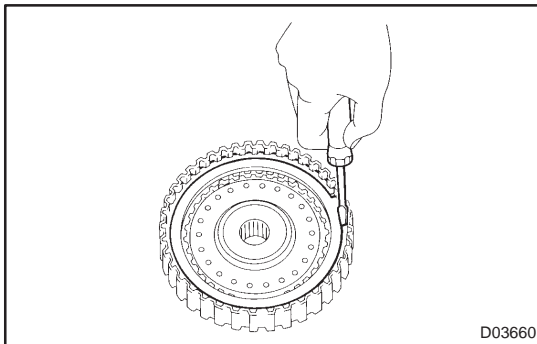

- (b) Using a screwdriver, install the snap ring.
 (c) Check that the end gap of the snap ring is not aligned with one of the cutouts.

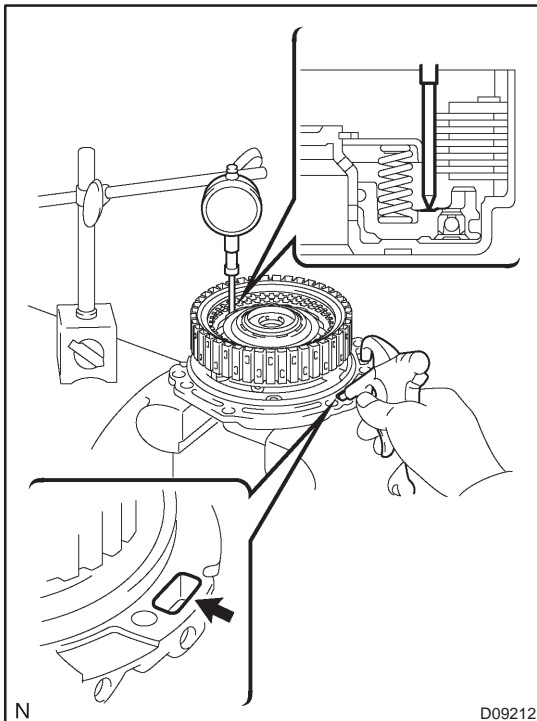

15. INSPECT PACK CLEARANCE OF FORWARD CLUTCH

- (a) Using a dial indicator, measure the forward clutch piston stroke while applying and releasing compressed air (392 kgf-cm², 4.0 kPa, 57 psi).

Piston stroke: 1.74 – 2.08 mm (0.0685 – 0.0819 in.)

If the piston stroke is less than the minimum, parts may have been assembled incorrectly. Check and reassemble again.


If the clearance is non-standard, select another flange.

HINT:

There are 5 different flanges in thickness.

Flange thickness: mm (in.)

No.	Thickness	No.	Thickness
1	3.00 (0.1181)	4	3.45 (0.1358)
2	3.15 (0.1240)	5	3.60 (0.1417)
3	3.30 (0.1299)	—	—

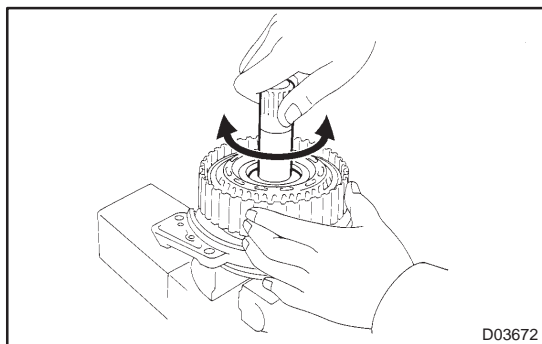

16. INSPECT FORWARD MULTIPLE DISC CLUTCH CLUTCH DISC

- (a) Inspect the clutch disc rotation.
 - (1) Check that the disc lightly rotates when rotating the forward clutch assembly after inserting the multiple disc clutch into it.

NOTICE:

Do not place the forward clutch assy in a vise.