 
 
 
 


FRONT SUSPENSION

 
 
 
PREPARATION

SST

020J1-01

| | | | |
|---|-------------|--------------------------------|--|
|  | 09628-62011 | Boll Joint Puller | STABILIZER BAR FRONT FRONT SUSPENSION ARM SUB-ASSY LOWER NO.1 LH(ATM) FRONT SUSPENSION ARM SUB-ASSY LOWER NO.1 LH(MTM) |
|  | 09727-30021 | Coil Spring Compressor | SHOCK ABSORBER ASSY FRONT LH |
|  | 09729-22031 | Front Spring Upper Seat Holder | SHOCK ABSORBER ASSY FRONT LH |
|  | 09930-00010 | Drive Shaft Nut Chisel | STABILIZER BAR FRONT FRONT SUSPENSION ARM SUB-ASSY LOWER NO.1 LH(ATM) FRONT SUSPENSION ARM SUB-ASSY LOWER NO.1 LH(MTM) |

Recommended Tools

| | | | |
|---|---------------|-------------------------|--|
|  | 09011-12301 | Socket Wrench 30 mm | STABILIZER BAR FRONT FRONT SUSPENSION ARM SUB-ASSY LOWER NO.1 LH(ATM) FRONT SUSPENSION ARM SUB-ASSY LOWER NO.1 LH(MTM) |
|  | 09040-00011 | Hexagon Wrench Set | SHOCK ABSORBER ASSY FRONT LH |
|  | (09043-20060) | Socket Hexagon Wrench 6 | SHOCK ABSORBER ASSY FRONT LH STABILIZER BAR FRONT FRONT SUSPENSION ARM SUB-ASSY LOWER NO.1 LH(ATM) |

Equipment

| | |
|-----------------------------------|--|
| Torque wrench | |
| Dial indicator with magnetic base | |
| Tire pressure gauge | |
| Alignment tester | |
| Toe-in gauge | |
| Angle gauge | |
| Camber-caster-kingpin gauge | |
| Belt tension gauge | |
| Engine Sling Device | |
| Universal Engine Lifter | |