
 
 
 
 
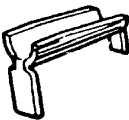
 
 



AUTOMATIC TRANSMISSION / TRANS

 
 
 
PREPARATION

020IX-01

SST

	09308-00010 Oil Seal Puller	FRONT DIFFERENTIAL OIL SEAL
	09316-60011 Transmission & Transfer Bearing Replacer	FRONT DIFFERENTIAL OIL SEAL
	(09316-00011) Replacer Pipe	FRONT DIFFERENTIAL OIL SEAL
	09350-32014 TOYOTA Automatic Transmission Tool Set	TORQUE CONVERTER CLUTCH AND DRIVE PLATE AUTOMATIC TRANSAXLE ASSY
	(09351-32010) One-way Clutch Test Tool	TORQUE CONVERTER CLUTCH AND DRIVE PLATE AUTOMATIC TRANSAXLE ASSY
	(09351-32020) Stator Stopper	TORQUE CONVERTER CLUTCH AND DRIVE PLATE AUTOMATIC TRANSAXLE ASSY
	09649-17010 Steering Knuckle Tool	FRONT DIFFERENTIAL OIL SEAL
	09950-70010 Handle Set	FRONT DIFFERENTIAL OIL SEAL
	(09951-07150) Handle 150	FRONT DIFFERENTIAL OIL SEAL

Recommended Tools

	09011-12301 Socket Wrench 30 mm	AUTOMATIC TRANSAXLE ASSY
	09040-00011 Hexagon Wrench Set	AUTOMATIC TRANSAXLE ASSY TRANSMISSION WIRE TRANSMISSION VALVE BODY ASSY FRONT DIFFERENTIAL OIL SEAL
	(09043-20100) Socket Hexagon Wrench 10	AUTOMATIC TRANSAXLE ASSY TRANSMISSION WIRE TRANSMISSION VALVE BODY ASSY FRONT DIFFERENTIAL OIL SEAL

Equipment

Straight edge	Torque converter clutch
Vernier calipers	Torque converter clutch
Dial indicator or dial indicator with magnetic base	Drive plate
Torque wrench	
Engine sling device	Automatic transaxle assy
Slide calipers	Automatic transaxle assy,Front differential oil seal
Chain block	Automatic transaxle assy
Filler gauge	Column shift parking lock cable

Lubricant

Item	Capacity	Classification
Automatic transaxle fluid		
Dry fill	8.60 liters (9.0 US qts, 7.6 Imp.qts)	ATF Type T-IV
Drain and refill	3.30 liters (3.5 US qts, 2.9 Imp.qts)	

SSM (Special Service Materials)

08833-00070	"Adhesive 1324," THREE BOND 1324 or equivalent	
-------------	---	--