

TORQUE SPECIFICATION

Part Tightened		N·m	kgf·cm	ft·lbf
Park/neutral position switch x Transaxle	Bolt	5.4	55	48 in·lbf
	Nut	6.9	70	61 in·lbf
Control shaft lever x Park/neutral position switch		12.7	130	9
Engine hanger x Engine		38	387	28
Drain plug x Oil pan		49	500	36
Transaxle x Engine	Bolt A:	64	650	47
	Bolt B:	46	470	34
	Bolt C:	44	449	32
Torque converter clutch x Drive plate		41	420	30
Engine mounting bracket RR x Transaxle		64	652	47
Oil filler tube x Transaxle		5.5	56	49 in·lbf
Control cable support x Transaxle	Bolt A:	18	184	13
	Bolt B:	12	122	8
Engine mounting bracket FR x Transaxle		64	652	47
Center member x Body	Bolt A:	45	459	33
	Bolt B:	80	816	59
Engine mounting insulator RR x Engine mounting bracket RR		87	887	64
Hose clamp x Engine mounting insulator RR		7.8	80	69
Engine mounting insulator RR x Suspension member		80	816	59
Engine mounting bracket LH x Transaxle		64	653	47
Engine mounting insulator LH x Body	Bolt A:	52	530	38
	Nut B:	56	571	41
Engine mounting insulator FR x Engine mounting bracket FR		56	571	41
Transmission oil cooler x Control cable support		18	184	13
Wire harness x Transaxle	Bolt A:	26	265	19
	Bolt B:	10	102	7
Starter x Transaxle		37	377	27
Starter wire x Starter		9.8	100	87 in·lbf
Air cleaner assy x Body		5.0	50	44 in·lbf
Engine cover x Engine		7.0	71	62 in·lbf
Speed sensor x Transaxle		11.3	1.5	8
Transmission wire x Transaxle		5.4	55	48
ATF temperature sensor x Valve Body		6.6	67	58 in·lbf
Oil pan x Transaxle		7.6	77	67 in·lbf
Solenoid valve x Valve body	Bolt A:	6.6	67	58 in·lbf
	Bolt B:	11	112	8
Valve body x Transaxle		11	112	8
Oil strainer x Valve body		11	112	8
Control shaft assy x Steering column		8.0	82	71 in·lbf
Control cable x Control shaft lever		13	133	8
Control cable x Body		8.0	82	71 in·lbf
Parking lock cable x Brake pedal		8.0	82	71 in·lbf