

DTC	P1335/13	CRANKSHAFT POSITION SENSOR CIRCUIT MALFUNCTION (DURING ENGINE RUNNING)
-----	----------	--

CIRCUIT DESCRIPTION

Refer to DTC P0335/12, 13 on page 05-72.

DTC No.	DTC Detecting Condition	Trouble Area
P1335/13	If conditions (a) through (c) are met: (a) NE \geq 1,000 rpm (b) NE signal is not detected for over 50 msec. (c) Not during cranking	<ul style="list-style-type: none">• Open or short in crankshaft position sensor circuit• Crankshaft position sensor• Crank angle sensor plate• ECM

WIRING DIAGRAM

Refer to DTC P0335/12, 13 on page 05-72.

INSPECTION PROCEDURE

Refer to DTC P0335/12, 13 on page 05-72.