

<b>DTC</b>	<b>89</b>	<b>ECM MALFUNCTION (ECM CIRCUIT)</b>
------------	-----------	--------------------------------------

## CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
89	ECM malfunction	• ECM

## INSPECTION PROCEDURE

### HINT:

Read freeze frame data using hand-held tester. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

<b>1</b>	<b>REPLACE ECM</b>
----------	--------------------