


Ts Terminal Circuit

CIRCUIT DESCRIPTION

The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected with the DTC check.


Connecting terminals Ts and CG of the DLC3 starts the check.

WIRING DIAGRAM

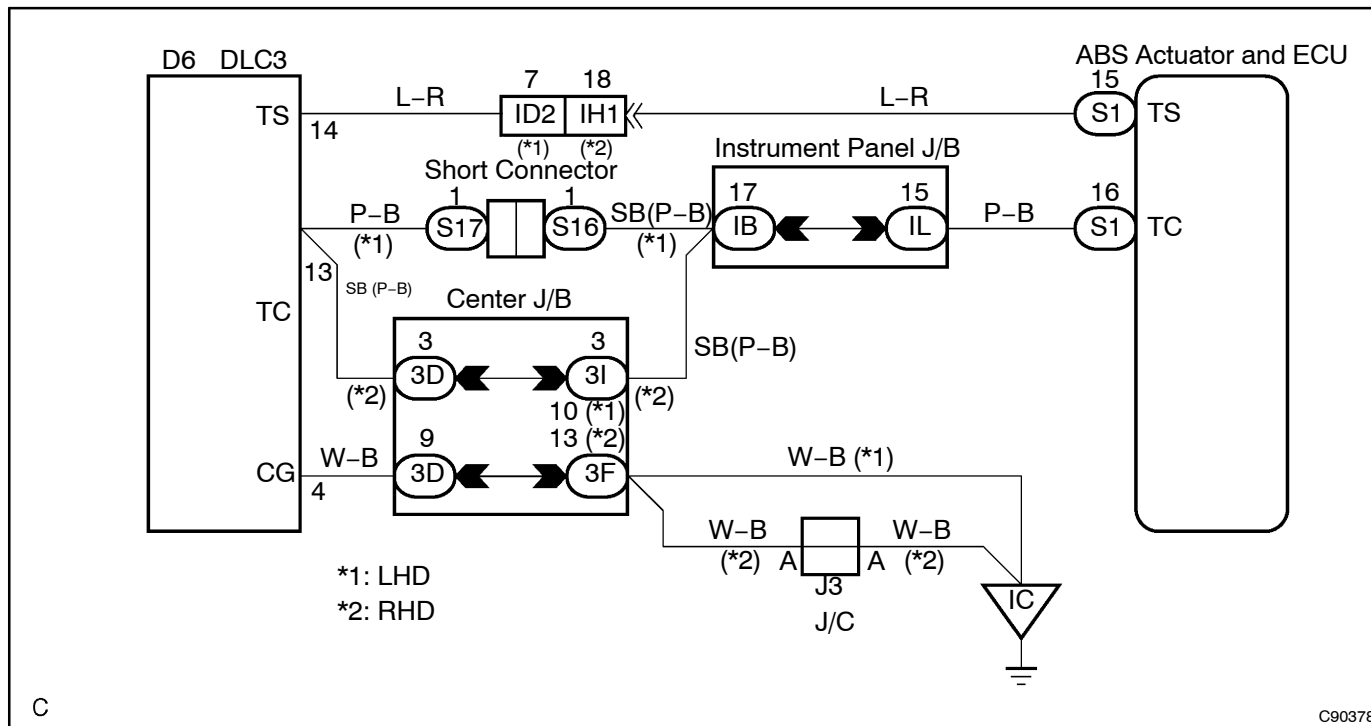

INSPECTION PROCEDURE

1 INSPECT DLC3

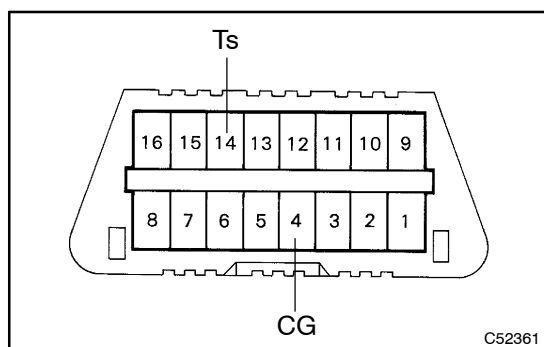

- Turn the ignition switch to ON.
- Measure voltage between terminals Ts and CG of DLC3.
Voltage: 10 – 14 V

OK

Go to step 3

NG

2

CHECK HARNESS AND CONNECTOR (BRAKE ACTUATOR ASSEMBLY - DLC3 - BODY GROUND) (See page 01-30)

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

CHECK AND REPLACE BRAKE ACTUATOR ASSY

3

INSPECT ABS WARNING LIGHT

SST 09843-18040

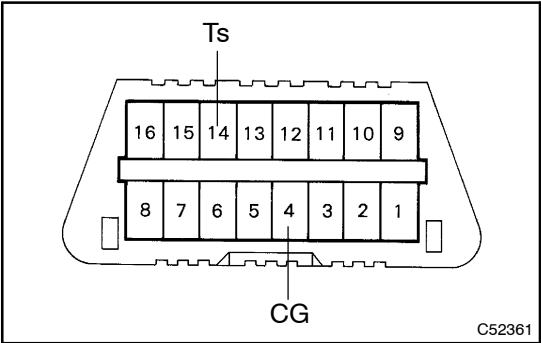

- (a) Using SST, connect the terminals Ts and CG of the DLC3.
 - (b) Check the ABS warning light.
- OK:**
ABS warning light blinking

OK

NO PROBLEM

NG

CHECK AND REPLACE BRAKE ACTUATOR ASSY