

PROBLEM SYMPTOMS TABLE

HINT:

Proceed with troubleshooting of each circuit in the table below.

Symptom	Suspect Area	See page
<ul style="list-style-type: none"> When the ignition switch is in ACC or ON position, the SRS warning light sometimes lights up after approx. 6 seconds have elapsed. SRS warning light is always lit up even when ignition switch is in the LOCK position. 	<ul style="list-style-type: none"> SRS WARNING LIGHT CIRCUIT MALFUNCTION (ALWAYS LIGHTS UP, WHEN IGNITION SWITCH IS LOCK POSITION). 	05-545
<ul style="list-style-type: none"> With the ignition switch in ACC or ON position, the SRS warning light does not light up. 	<ul style="list-style-type: none"> SRS WARNING LIGHT CIRCUIT MALFUNCTION (DOES NOT LIGHT UP, WHEN IGNITION SWITCH IS TURNED TO ACC OR ON). 	05-548
<ul style="list-style-type: none"> DTC is not displayed. SRS warning light is always lit up at the time of DTC check procedure. DTC is displayed without Tc and CG terminal connection. 	<ul style="list-style-type: none"> TC TERMINAL CIRCUIT 	05-550