

DTC B0138/72 SHORT IN P/T SQUIB (LH) CIRCUIT (TO B+)

CIRCUIT DESCRIPTION

The P/T squib (LH) circuit consists of the airbag sensor assy center and seat belt pretensioner (LH). It causes the SRS to deploy when the SRS deployment conditions are satisfied. DTC B0138/72 is recorded when a B+ short is detected in the P/T squib (LH) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0138/72	<ul style="list-style-type: none"> • Short circuit in seat belt pretensioner (LH) wire harness (to B+) • P/T squib (LH) malfunction • Airbag sensor assy center malfunction 	<ul style="list-style-type: none"> • Seat belt pretensioner (LH) • Airbag sensor assy center • Floor wire No. 2

WIRING DIAGRAM

See page 05-480.

INSPECTION PROCEDURE

1 CHECK P/T SQUIB (LH) CIRCUIT

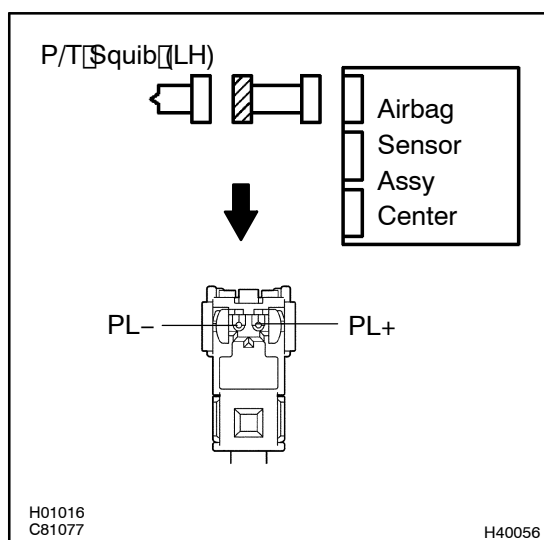

- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Disconnect the connectors between the airbag sensor assy center and the seat belt pretensioner (LH).
- Connect the negative (-) terminal cable to the battery, and turn the ignition switch to ON.
- For the connector (on the seat belt pretensioner side) between the seat belt pretensioner (LH) and the airbag sensor assy center, measure the voltage between PL+ and body ground.

OK:

Voltage: Below 1V


NG

REPAIR OR REPLACE FLOOR WIRE NO.2

OK

2 CHECK AIR BAG SENSOR ASSY CENTER

SST 09843-18040

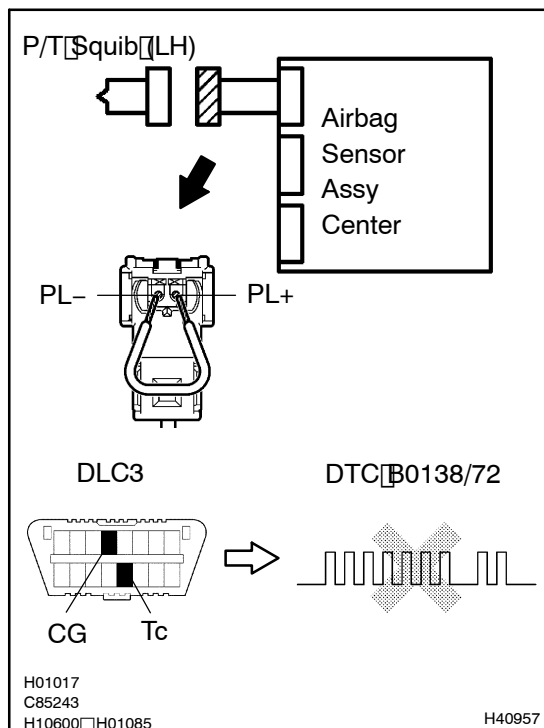

- Disconnect the negative (-) terminal cable from the battery and wait at least for 90 seconds.
- Connect the connector to the airbag sensor assy center.
- Using a service wire, connect PL+ and PL- of the connector (on the seat belt pretensioner side) between the seat belt pretensioner (LH) and the airbag sensor assy center.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page 05-403).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch to ON, and wait at least for 20 seconds.
- Check the DTC (See page 05-403).


OK:**DTC B0138/72 is not output.****HINT:**

Codes other than code B0138/72 may be output at this time, but they are not relevant to this check.

NG**REPLACE AIR BAG SENSOR ASSY CENTER****OK**

3 CHECK P/T SQUIB (LH)

SST 09843-18040

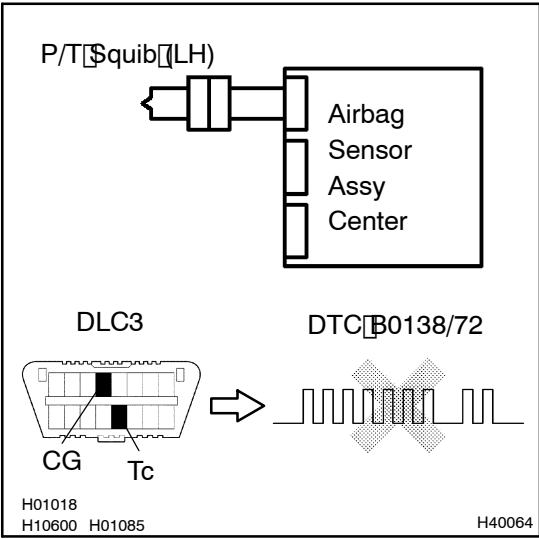

- (a) Turn the ignition switch to LOCK.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- (c) Connect the seat belt pretensioner (LH) connector.
- (d) Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- (e) Turn the ignition switch to ON, and wait at least for 20 seconds.
- (f) Clear the DTC stored in memory (See page 05-403).
- (g) Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- (h) Turn the ignition switch to ON, and wait at least for 20 seconds.
- (i) Check the DTC (See page 05-403).

OK:

DTC B0138/72 is not output.

HINT:

Codes other than code B0138/72 may be output at this time, but they are not relevant to this check.

NG

REPLACE FRONT SEAT OUTER BELT ASSY LH

OK

4 USE SIMULATION METHOD TO CHECK

NG

Go to step 1

OK

REPLACE ALL SRS COMPONENTS INCLUDING THE WIRE HARNESS