


TERMINALS OF ECU

1. DISPLAY

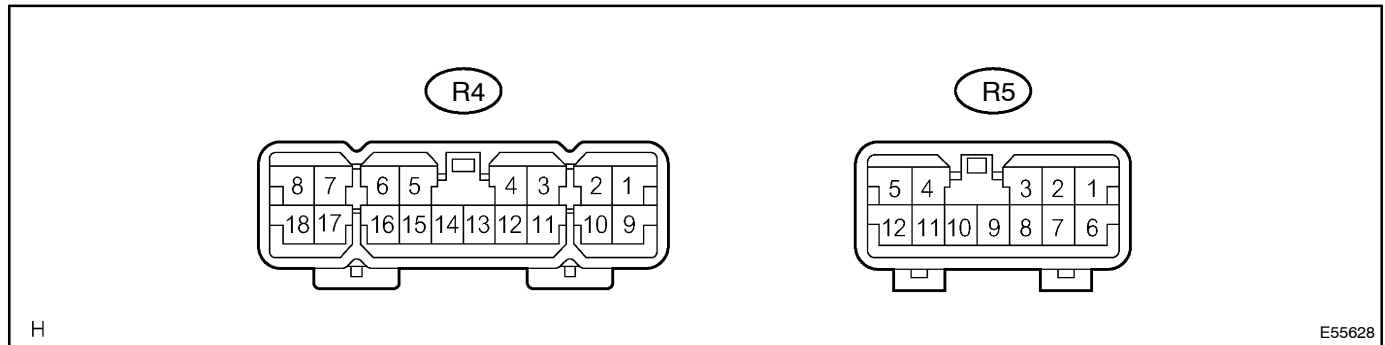


Terminal No. (Symbols)	Wiring Color	Condition	specified condition
R4-1 ⇔ R4-4 (VER2 ⇔ GND)	W-B ⇔ W-B	Constant	Continuity
R4-2 ⇔ R4-4 (VER1 ⇔ GND)	W-B ⇔ W-B	Constant	Continuity
R4-3 ⇔ - (TX+ ⇔ -)	G ⇔ -	-	System does not operate
R4-4 ⇔ Body ground (GND ⇔ Body ground)	W-B ⇔ -	Constant	Continuity
R4-7 ⇔ R4-4 (IG ⇔ GND)	L-O(*1), B-R(*2) ⇔ W-B	Ignition switch ON	10 - 14 V
R4-8 ⇔ R4-4 (+B ⇔ GND)	L-Y ⇔ W-B	Constant	10 - 14 V
R4-11 ⇔ - (TX- ⇔ -)	R ⇔ -	-	
R4-12 ⇔ - (TH- ⇔ -)	BR ⇔ -	-	Outside temp does not operate
R4-13 ⇔ - (TH+ ⇔ -)	G-Y ⇔ -	-	Outside temp does not operate
R4-14 ⇔ - (TAUB ⇔ -)	B ⇔ W-B	Ignition switch ON	10 - 14 V
R4-15 ⇔ - (TAU ⇔ -)	R ⇔ W-B		
R4-16 ⇔ R4-4 (SPD ⇔ GND)	W-R ⇔ W-B	See "Vehicle signal check mode"	-
R4-17 ⇔ R4-4 (ILL+ ⇔ -)	G ⇔ W-B	Radio receiver assy does not light up	10 - 14 V
R4-18 ⇔ R4-4 (ACC ⇔ -)	GR ⇔ W-B	Ignition switch ACC	10 - 14 V
R5-9 ⇔ - (TX- ⇔ -)	R ⇔ -	Service mode	System does not operate
R5-10 ⇔ - (TX+ ⇔ -)	G ⇔ -	Service mode	System does not operate
R5-12 ⇔ R5-8 (ACC ⇔ GND)	⇔ W-B	Ignition switch ACC	10 - 14 V

HINT:

*1:LHD models

*2:RHD models

2. RADIO RECEIVER ASSY

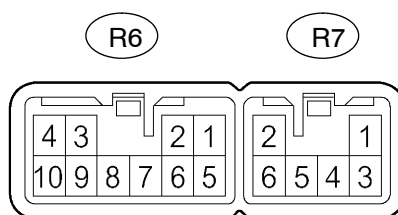

E55641

Terminal No. (Symbols)	Wiring Color	Condition	STD Voltage (V)
R6-1 ⇔ R6-7 (FR+ ⇔ GND)	LG ⇔ BR	Audio system is sounding	FR Speaker does not sound
R6-2 ⇔ R6-7 (FL+ ⇔ GND)	P ⇔ BR	Audio system is sounding	FL Speaker does not sound
R6-3 ⇔ R6-7 (ACC ⇔ GND)	GR ⇔ BR	Ignition switch ACC	10 – 14 V
R6-4 ⇔ R6-7 (+B ⇔ GND)	L-Y ⇔ BR	Constant	10 – 14 V
R6-5 ⇔ R6-7 (FR- ⇔ GND)	L ⇔ BR	Audio system is sounding	FR Speaker does not sound
R6-6 ⇔ R6-7 (FL- ⇔ GND)	V ⇔ BR	Audio system is sounding	FL Speaker does not sound
R6-7 ⇔ Body ground (GND ⇔ Body ground)	BR ⇔ -	Constant	Continuity
R6-10 ⇔ R6-7 (ILL+ ⇔ GND)	G ⇔ BR	Light control switch TAIL or HEAD	10 – 14 V
R7-1 ⇔ R6-7 (RR+ ⇔ GND)	R ⇔ BR	Audio system is sounding	RR Speaker does not sound
R7-2 ⇔ R6-7 (RL+ ⇔ GND)	B ⇔ BR	Audio system is sounding	RL Speaker does not sound
R7-3 ⇔ R6-7 (RR- ⇔ GND)	W ⇔ BR	Audio system is sounding	RR Speaker does not sound
R7-6 ⇔ R6-7 (RL- ⇔ GND)	Y ⇔ BR	Audio system is sounding	RL Speaker does not sound