

# PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Pressing power switch does not start system.	1. Radio receiver assy power source circuit 2. Radio receiver assy	<a href="#">05-573</a>
Turning on light switch does not light up night time illumination of radio receiver.	1. Radio receiver assy ILL terminal circuit 2. Radio receiver assy	<a href="#">05-575</a>
No sound is heard from speaker in all modes.	1. Speaker circuit 2. Radio receiver assy power source circuit 3. Radio receiver assy	<a href="#">05-577</a>
Sound quality is bad in all modes. (Volume is too low)	1. Speaker circuit 2. Radio receiver assy power source circuit 3. Radio receiver assy	<a href="#">05-581</a>
Radio broadcast cannot be received. (Bad reception)	1. Antenna circuit 2. Radio receiver assy	<a href="#">05-585</a>
Cassette tape cannot be inserted or played.	1. Cassette tape 2. Radio receiver assy power source circuit 3. Radio receiver assy	<a href="#">05-587</a>
Cassette tape cannot be ejected.	1. Cassette tape 2. Radio receiver assy power source circuit 3. Radio receiver assy	<a href="#">05-589</a>
Sound quality is bad only when playing tape.	1. Cassette tape 2. Radio receiver assy	<a href="#">05-592</a>
Tape is tangled due to incorrect tape speed or auto-reverse malfunction.	1. Cassette tape 2. Radio receiver assy	<a href="#">05-593</a>
CD cannot be inserted or is ejected right after insertion.	1. CD 2. Radio receiver assy power source circuit 3. Radio receiver assy	<a href="#">05-594</a>
Although system is powered, CD cannot be played.	1. CD 2. Radio receiver assy power source circuit 3. Radio receiver assy	<a href="#">05-597</a>
CD cannot be taken out.	1. CD 2. Radio receiver assy power source circuit 3. Radio receiver assy	<a href="#">05-600</a>
Sound quality is bad only when CD is played. (Volume is too low)	1. CD	<a href="#">05-603</a>
CD sound skips.	1. CD 2. Radio installation	<a href="#">05-604</a>
Dont display fuel efficiency.	1. Engine and ECT ECU 2. Radio receiver assy	<a href="#">05-606</a>
The ambient temperature does not display.	1. Ambient temperature sensor 2. Radio receiver assy	<a href="#">05-608</a>
Noise occurs.	–	<a href="#">05-610</a>