


DONT DISPLAY FUEL EFFICIENCY

WIRING DIAGRAM


LHD models:

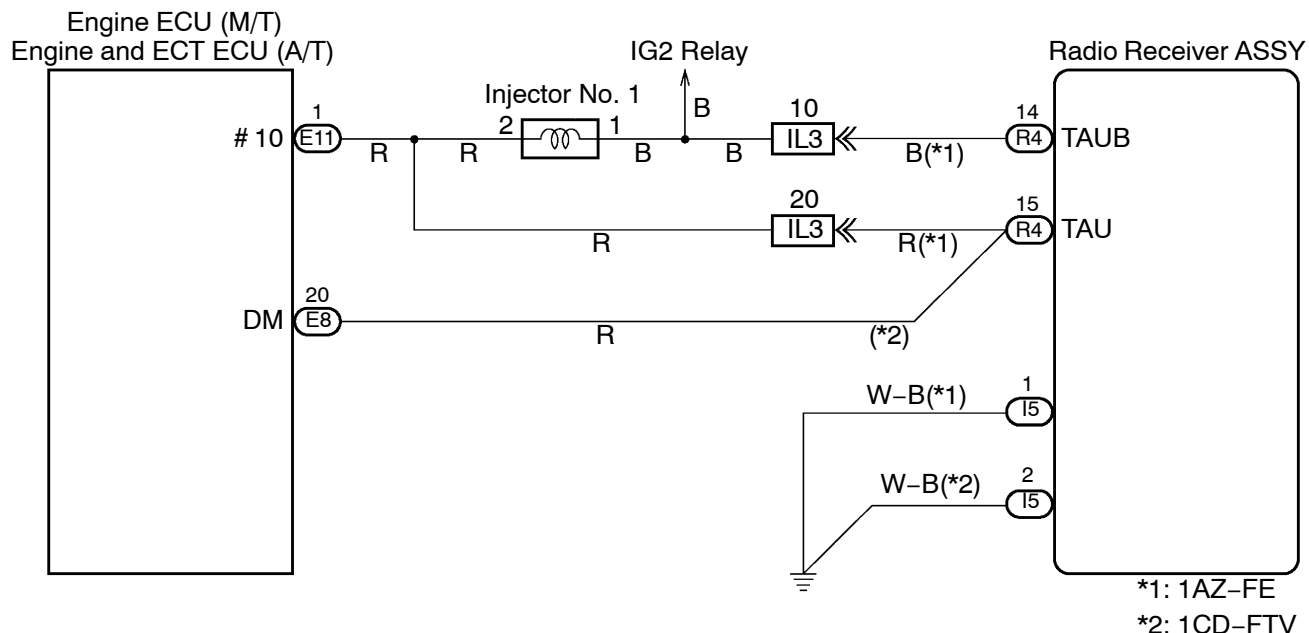

H

E55637

RHD models:

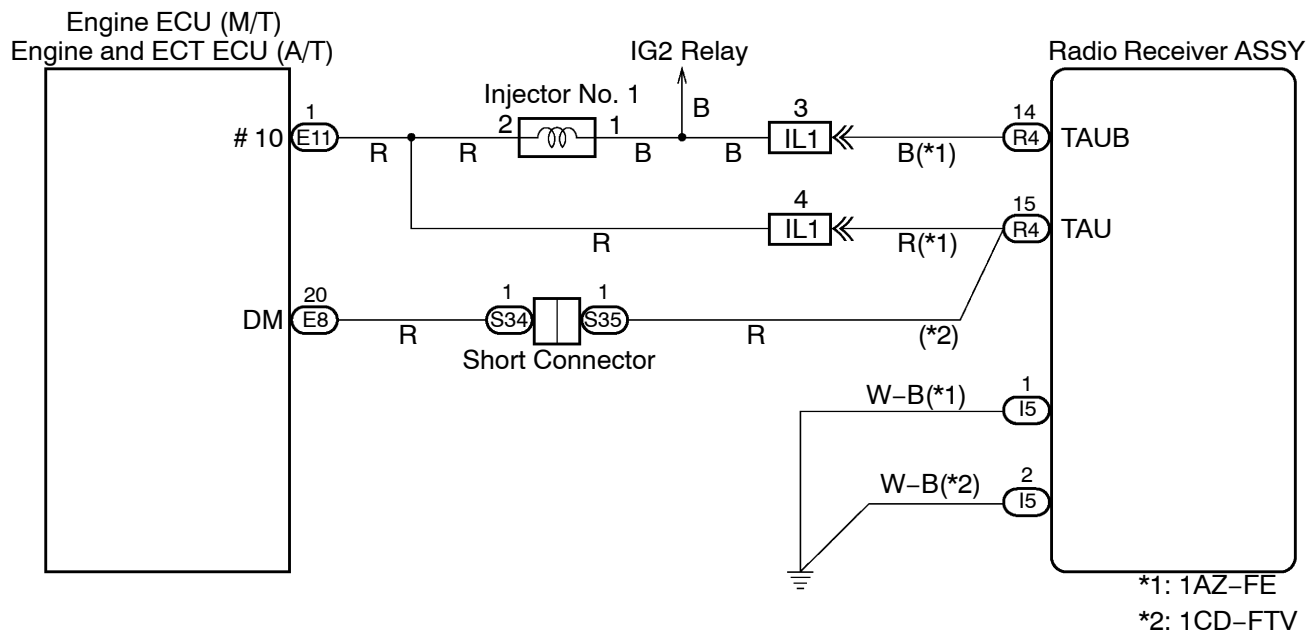


H

E55638

INSPECTION PROCEDURE

1 CHECK HARNESS AND CONNECTOR (RADIO RECEIVER ASSY-ENGINE ECU)

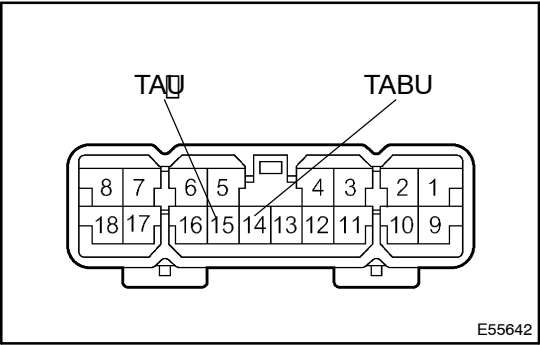

(a) Check that the voltage between terminals at each condition, as shown in the chart.

Standard:

Tester connection	Condition	Specified condition
TAUB - GND	Ignition switch ON	10 - 14 V
TAU - GND	Engine running	10 - 14 V

NG REPAIR OR REPLACE COMPUTER ASSY, ENGINE CONTROL (See page 01-30)

OK

CHECK AND REPLACE RADIO RECEIVER ASSY