

PROBLEM SYMPTOMS TABLE

Problem Symptom	Suspected Area	See Page
AUTO UP/AUTO DOWN operation of driver's door window is impossible (manual operation is possible)	1. Power window regulator master switch assembly 2. Power window regulator motor assembly LH	05-614 05-632
AUTO UP/AUTO DOWN operation of passenger's door window is impossible (manual operation is possible)	1. Power window regulator master switch assembly 2. Power window regulator motor assembly RH	05-614 05-636
AUTO UP/AUTO DOWN operation of rear right door window is impossible (manual operation is possible)	1. Power window regulator master switch assembly 2. Power window regulator motor assembly LH	05-614 05-638
AUTO UP/AUTO DOWN operation of rear left door window is impossible (manual operation is possible)	1. Power window regulator master switch assembly 2. Power window regulator motor assembly RH	05-614 05-638
Driver's door window goes down during auto up operation	1. Power window regulator switch assembly 2. Power window regulator motor assembly LH	05-616 05-632
Passenger's door window goes down during auto up operation	1. Power window regulator switch assembly 2. Power window regulator motor assembly RH	05-620 05-636
Rear right door window goes down during auto up operation	1. Power window regulator switch assembly 2. Power window regulator motor assembly LH	05-624 05-638
Rear left door window goes down during auto up operation	1. Power window regulator switch assembly 2. Power window regulator motor assembly RH	05-628 05-638
Driver's door window does not go down although foreign objects are caught in between	1. Power window regulator master switch assembly 2. Power window regulator motor assembly LH	05-614 05-632
Passenger's door window does not go down although foreign objects are caught in between	1. Power window regulator switch assembly 2. Power window regulator motor assembly RH	05-620 05-636
Rear right door window does not go down although foreign objects are caught in between	1. Power window regulator switch assembly 2. Power window regulator motor assembly LH	05-624 05-638
Rear left door window does not go down although foreign objects are caught in between	1. Power window regulator switch assembly 2. Power window regulator motor assembly RH	05-628 05-638
Remote operation via master switch is impossible in the other seat (operation via each door switch is possible)	1. Power window regulator master switch assembly 2. Wire harness	05-614 —
Window cannot be operated after key-OFF	1. Front door courtesy light switch assembly 2. Power window regulator master switch assembly	65-5 05-614