

## REAR LEFT DOOR WINDOW DOES NOT GO DOWN ALTHOUGH FOREIGN OBJECTS ARE CAUGHT IN BETWEEN

### CIRCUIT DESCRIPTION

The rear left door power window regulator switch assembly controls the rear left door power window motor. The jam protection functions only within the operation range of the jam protection during the AUTO UP operation.

### INSPECTION PROCEDURE

#### 1 CHECK JAM PROTECTION FUNCTION OPERATING CONDITION

- (a) Turn the ignition switch ON.  
 (b) The AUTO UP operation works with the ignition switch ON (One-Touch operation).

NO

NORMALITY

YES

#### 2 CHECK POWER WINDOW REGULATOR SWITCH ASSY REAR

- (a) Check the operation.  
 (1) Turn the ignition switch ON.  
 (2) Check if AUTO UP and AUTO DOWN operate.

NG

AUTO UP/DOWN OPERATION OF DRIVER'S DOOR WINDOW IS IMPOSSIBLE (See Page 05-616)

OK

#### 3 CHECK JAM PROTECTION FUNCTION OPERATING RANGE

- (a) Check the jam protection function does not operate with 4 mm before the full-closed position of the door glass.

OK

NORMAL

NG

#### 4 RESET POWER WINDOW REGULATOR MOTOR (See page 75-14)

OK

NORMAL

NG

REPLACE POWER WINDOW REGULATOR SWITCH ASSY REAR