




LOCATION

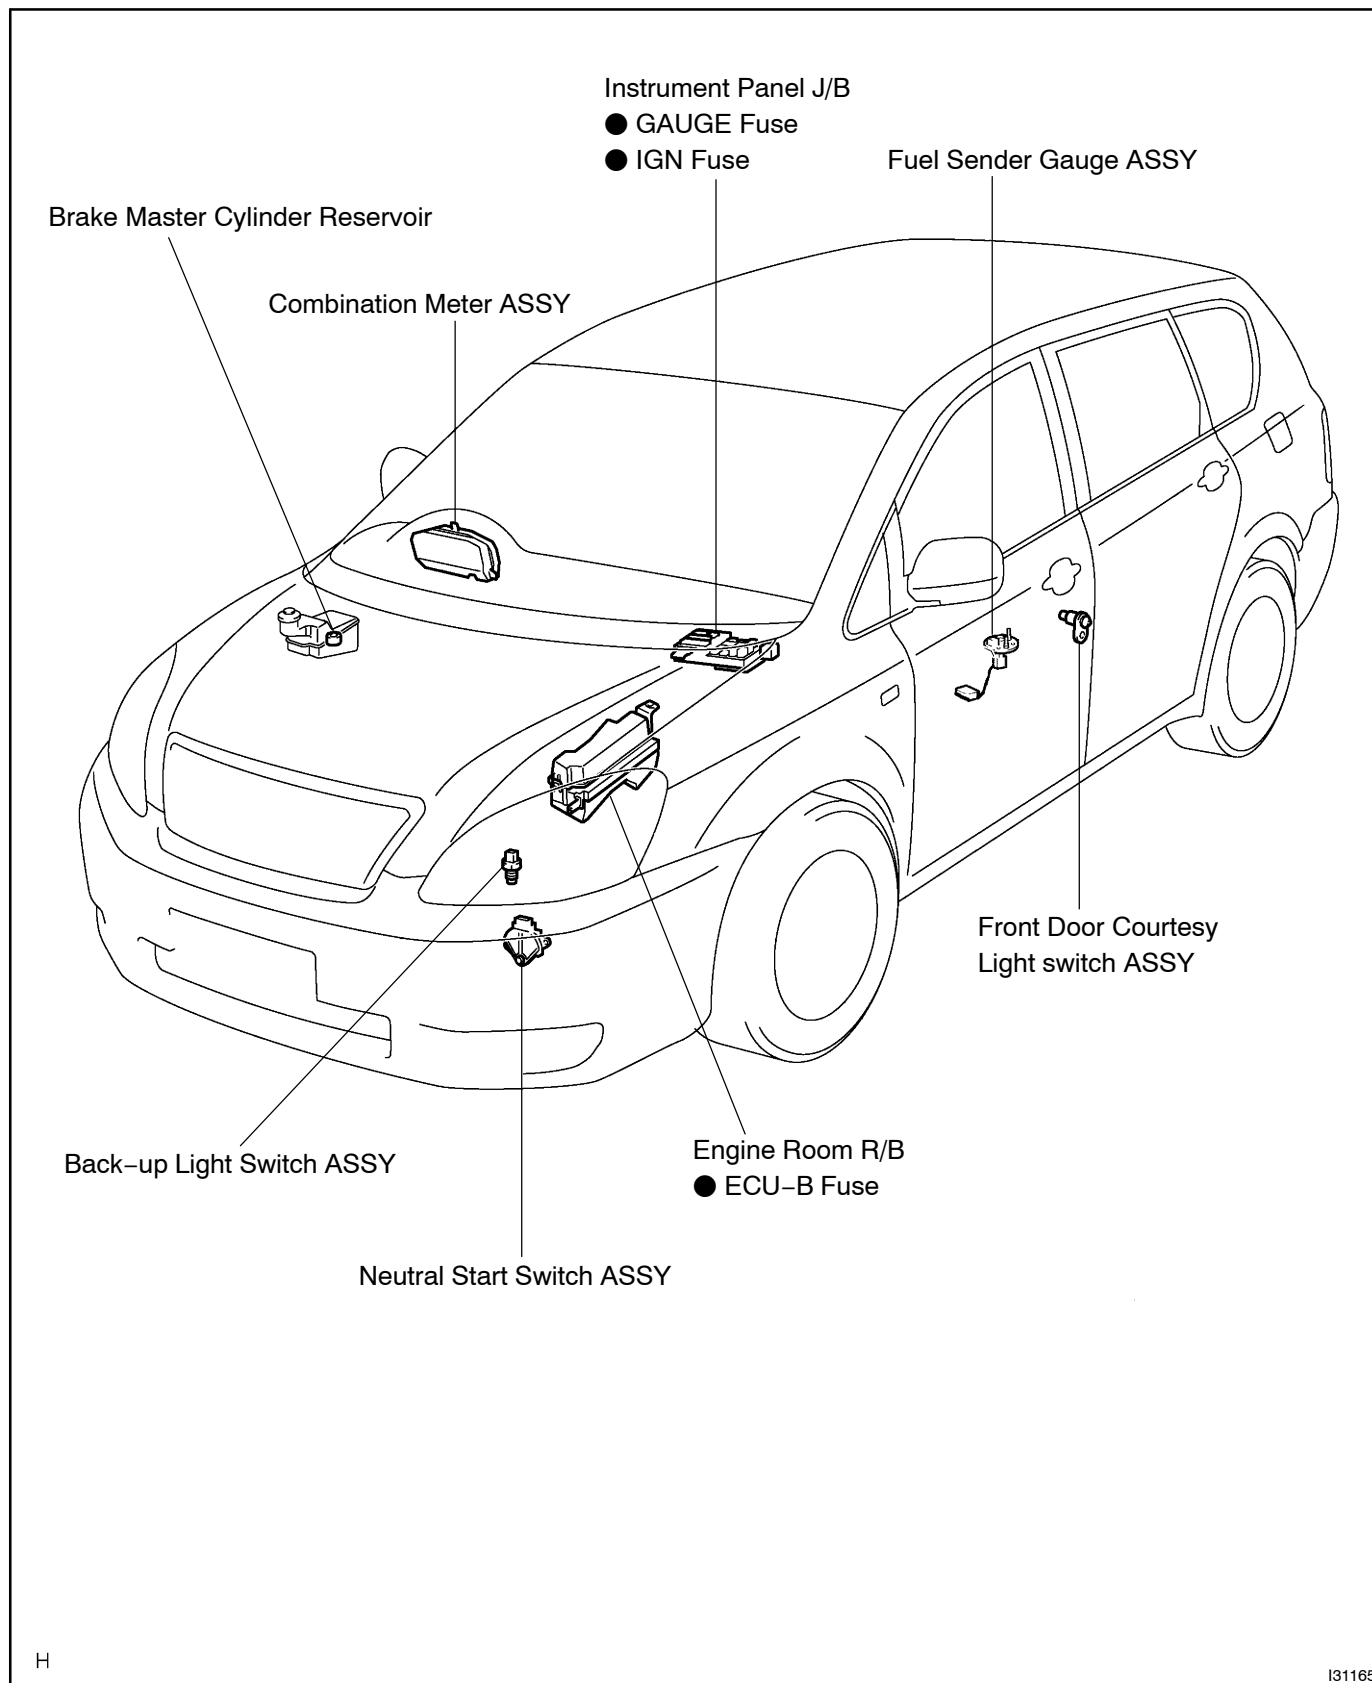


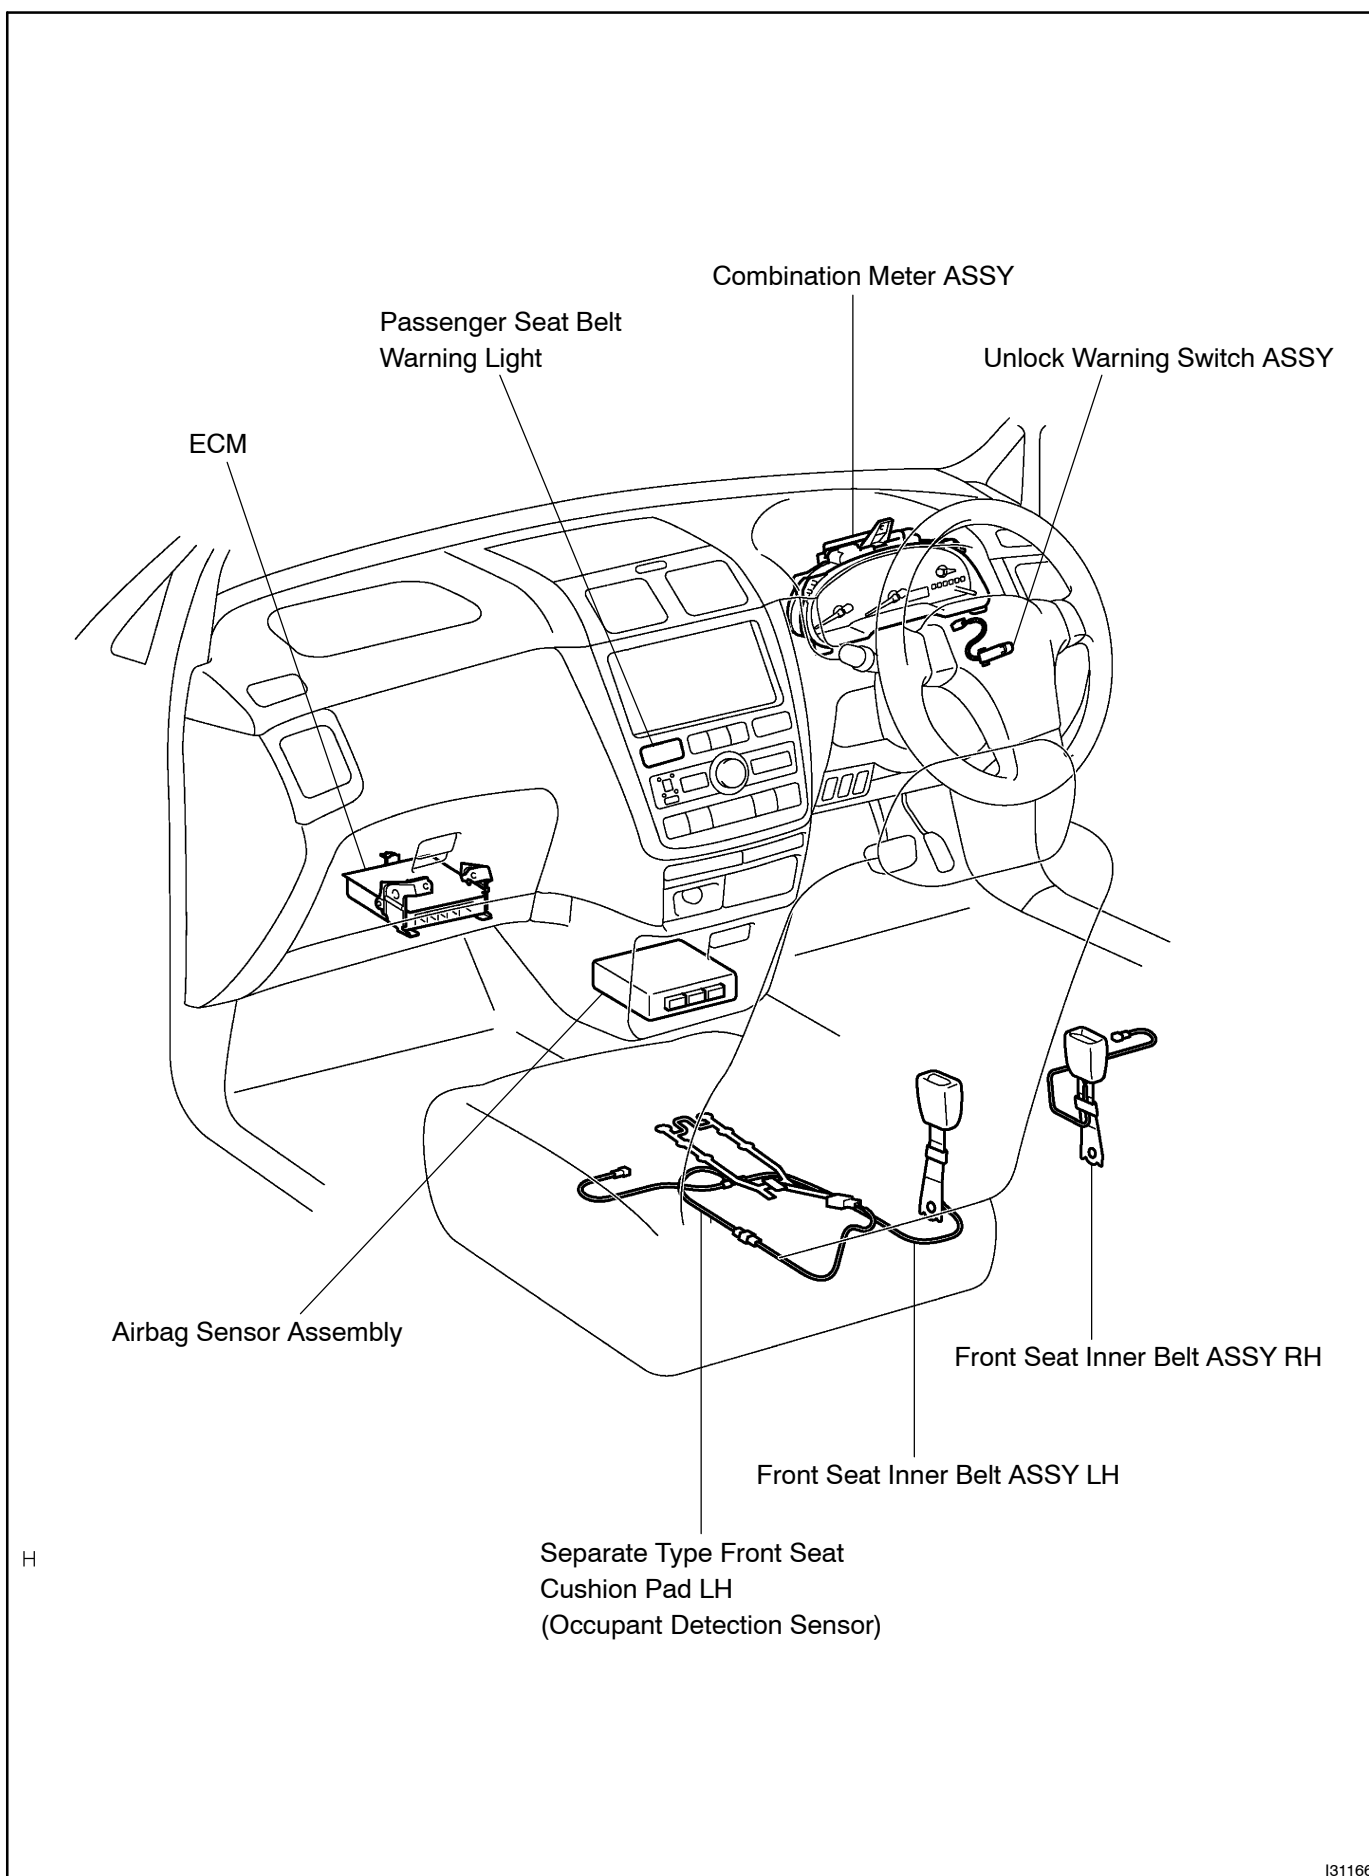


H

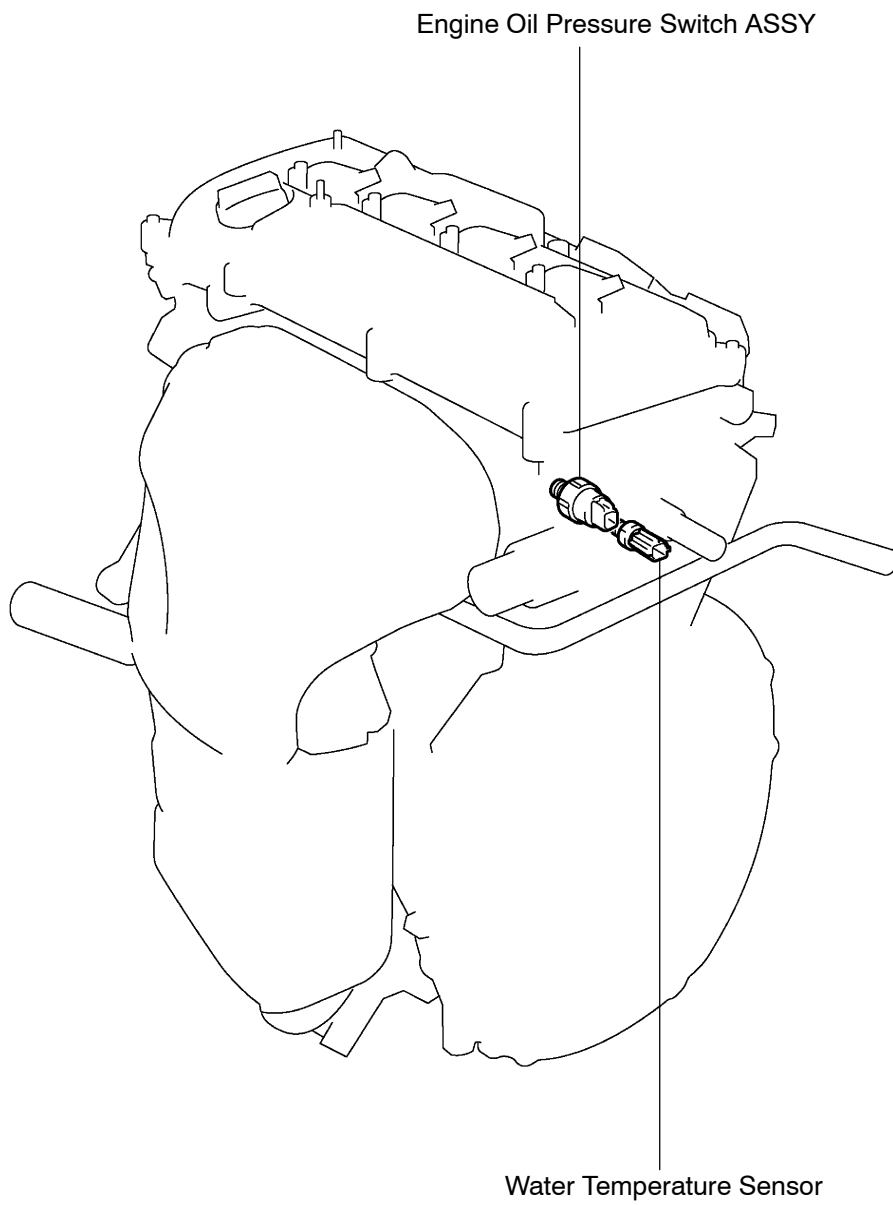

H

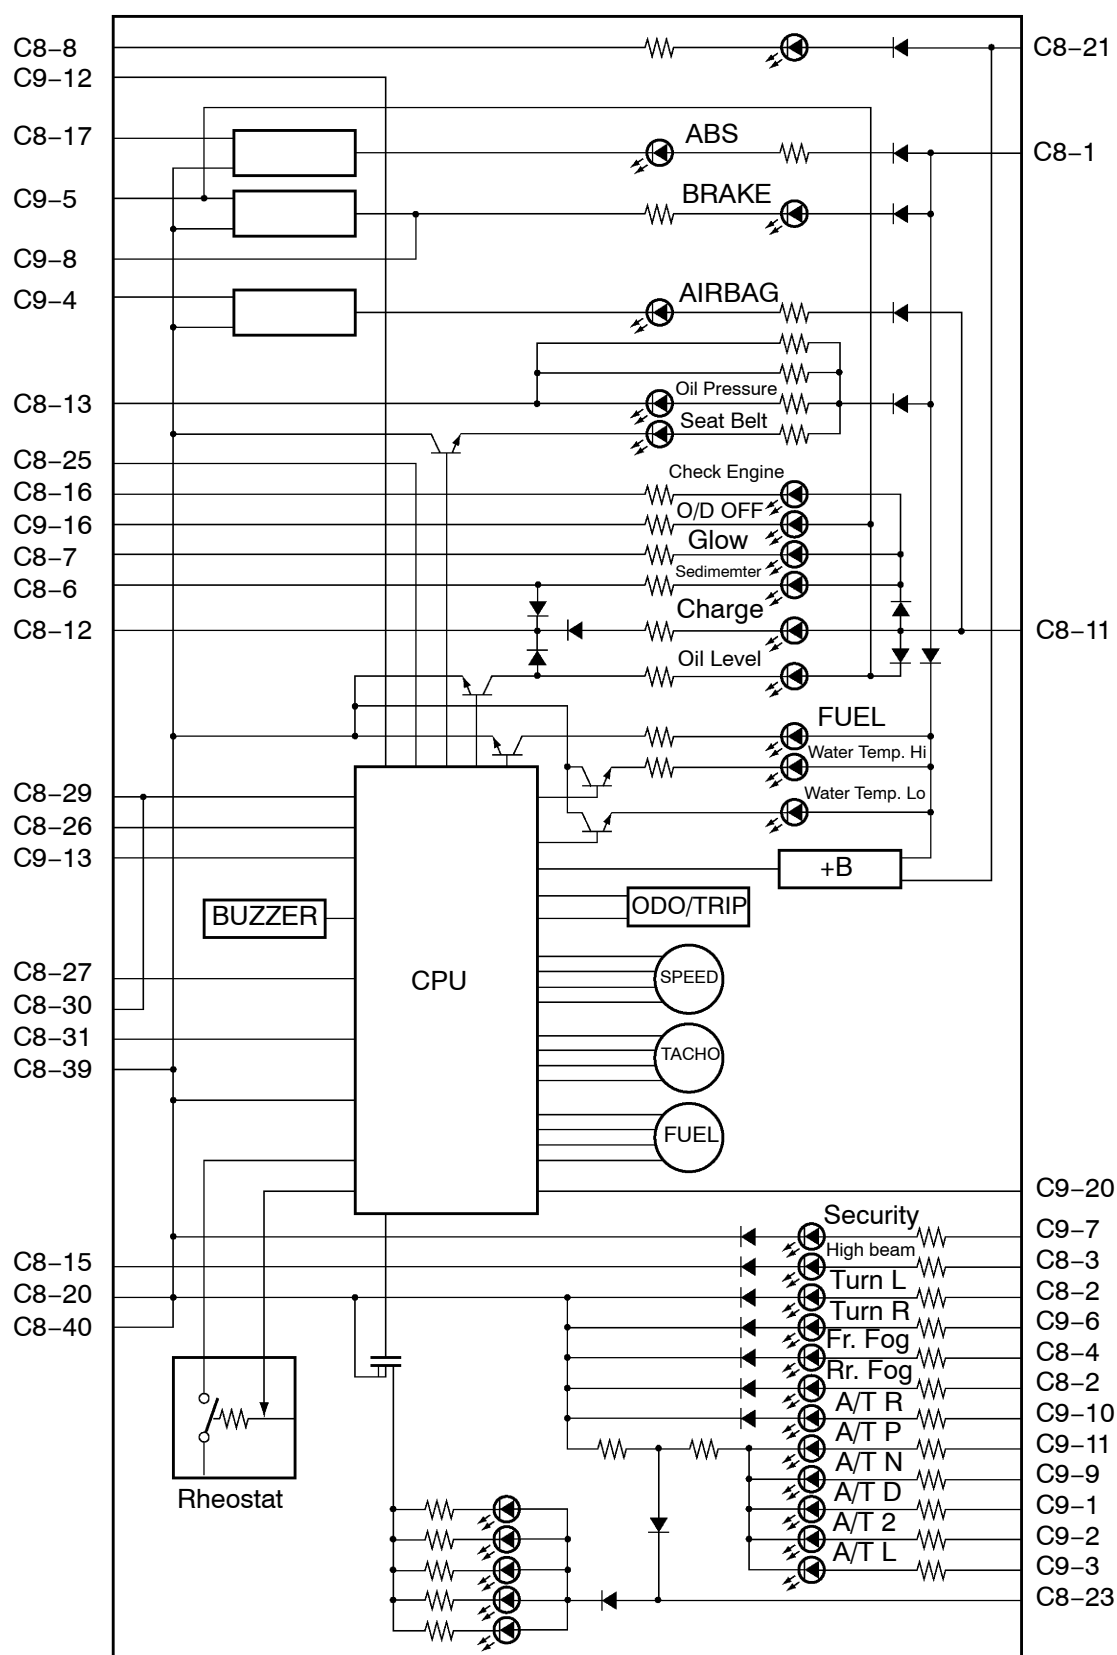

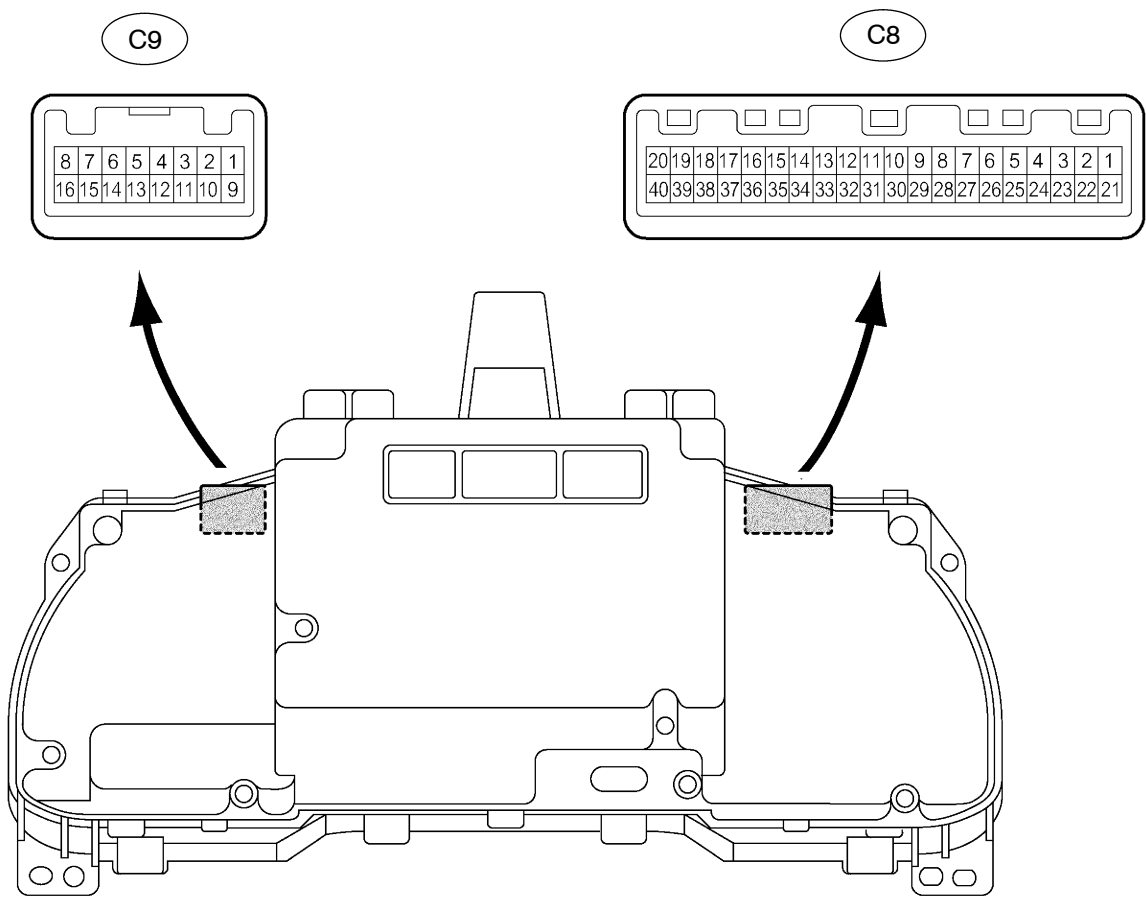

Terminal No.	Wire harness side
C8	1 GAUGE Fuse
	2 Body ECU
	3 Headlight Dimmer Relay
	4 Body ECU
	6 Fuel Filter Warning Switch (*1)
	7 ECM (*1)
	8 Body ECU
	11 IGN Fuse
	12 Alternator
	13 Oil Pressure Switch
	15 Headlight Lamp
	16 Engine and ECT ECU (*3), ECM (*4)
	17 Skid Control ECU and Actuator (ABS)
	20 Ground (Signal Ground)
	21 ECU-B Fuse
	22 TVSS ECU
	23 Taillight Relay (*5), Body ECU (*6)
	25 Driver Side Buckle Switch (*7)
	26 Engine and ECT ECU (*3), ECM (*4)
	27 Skid Control ECU and Actuator (SI)
	28 Engine and ECT ECU (*3), ECM (*4)
	29 Engine and ECT ECU (*3), ECM (*4)
	30 PTC Heater Amplifier (*2)
	31 Fuel Sender Gauge
	39 Ground (Fuel Ground)
	40 Power Ground
C9	1 A/T Indicator Light Switch
	2 A/T Indicator Light Switch
	3 A/T Indicator Light Switch
	4 Airbag Sensor Assembly
	5 Skid Control ECU and Actuator (L)
	6 Brake Fluid Level Warning Switch, Brake Vacuum Warning Switch (*1)
	7 Engine and ECT ECU (*3), ECM (*4)
	8 TVSS ECU
	9 A/T Indicator Light Switch
	10 A/T Indicator Light Switch
	11 A/T Indicator Light Switch
	12 Body ECU
	13 Engine Oil Level Sensor
	16 Engine and ECT ECU

*1: 1CD-FTV Engine *2: 1AZ-FE Engine *3: 1CD-FTV Engine, A/T *4: Except 1CD-FTV Engine, A/T
 *5: LHD, w/Daylight Running Light and RHD *6: LHD, w/o Daytime Running Light *7: RHD