

CODE 1-1 IS NOT OUTPUT**NOTICE:**

The DTC is 1CD-FTV engine only.

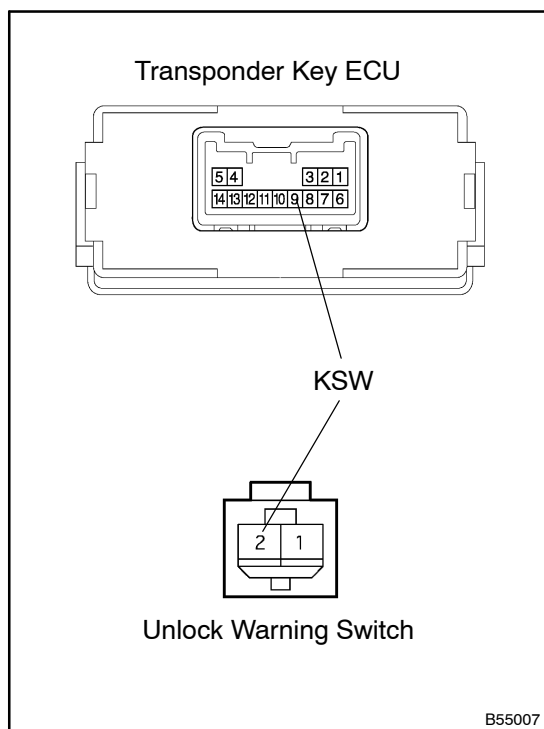
CIRCUIT DESCRIPTION

The transponder key ECU outputs DTC11 when the key unlock warning switch is ON (key is inserted).

HINT:

DTC11 is a normal code.

DTC No.	DTC detecting condition	Trouble area
11	Code 1-1 is not output	<ul style="list-style-type: none">•Unlock warning switch•Transponder key ECU

INSPECTION PROCEDURE**1 CHECK UN-LOCK WARNING SWITCH ASSY****NG****REPLACE UN-LOCK WARNING SWITCH ASSY****OK****2 CHECK WIRE HARNESS**

- (a) Disconnect the transponder key ECU connector and unlock warning switch connector, and check the continuity between each terminal on the wire harness side.

Terminals (Unlock SW - ECU)	Specified condition
2 (KSW) - 9 (KSW)	Continuity

NG**REPLACE HARNESS AND CONNECTOR****OK****REPLACE TRANSPONDER KEY ECU ASSY**