

<b>DTC</b>	<b>B2795</b>	<b>UNMATCHED KEY CODE</b>
------------	--------------	---------------------------

## CIRCUIT DESCRIPTION

This DTC is output when an unregistered key is inserted.

DTC No.	DTC Detecting Condition	Trouble Area
B2795	Key with different ID code inserted in ignition switch	Key

## INSPECTION PROCEDURE

<b>1</b>	<b>REREGISTER OR REPLAE KEY THAT DOES NOT START ENGINE</b>
----------	--

- (a) Check whether the engine starts, after the reregistration of the key that does not start the engine has been done.

OK

**REREGISTER OR REPLAE KEY THAT DOES NOT START ENGINE**

NG

<b>REPLACE KEY THAT DOES NOT START ENGINE</b>
---