

DTC**B2797****COMMUNICATION MALFUNCTION NO.1****CIRCUIT DESCRIPTION**

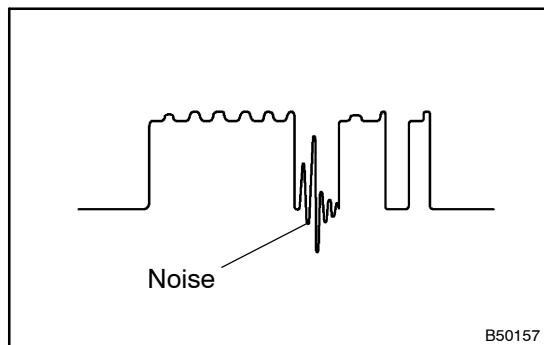
This code is detected when an error occurs in normal communication.

(Example: Some noise is included in communication line.)

DTC No.	DTC Detection Condition	Trouble Area
B2797	Communication Error	<ul style="list-style-type: none"> • Transponder Key Amplifier • Unregistered Key Inserted Before • Wire Harness • ECM

WIRING DIAGRAM

Refer to DTC B2796 on [page 05-708](#).

1 CHECK ECM

- (a) Insert the master key already registered in the key cylinder.
- (1) Using an oscilloscope or hand-held tester, check that noise is included in the CODE terminal of the ECM.

Standard: No noise is detected.

NG**FIND CAUSE OF NOISE AND REMOVE IT****OK****2 CHECK OPERATION OF TRANSPONDER KEY AMPLIFIER**

- (a) Does it operate normally after replacement of transponder key amplifier?

OK**NORMAL (TRANSPONDER KEY AMPLIFIER DETECTIVE)****NG****REPLACE ECM**