


FUEL FILTER ELEMENT SUB-ASSY (1CD-FTV)

REPLACEMENT

1106B-01

1. REMOVE AIR CLEANER ASSY

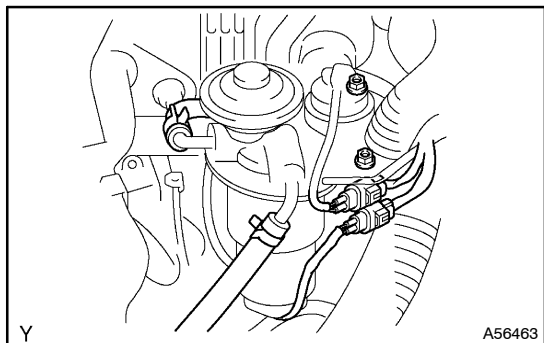


2. REMOVE FUEL FILTER ASSEMBLY

- (a) Disconnect the 2 fuel hoses.
- (b) Disconnect the connectors. (STD)
- (c) Disconnect the 2 connectors. (COLD)
- (d) Remove the 2 nuts and fuel filter.

3. DRAIN FUEL

- (a) Loosen the drain plug, and drain the fuel from the fuel filter.

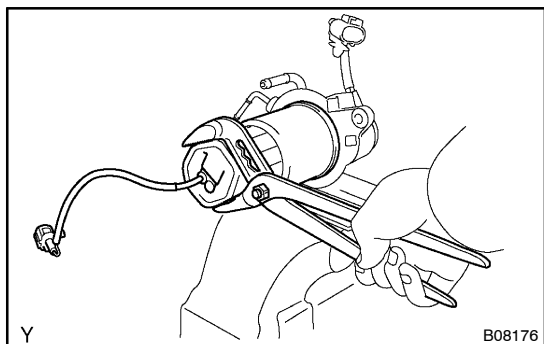


4. REMOVE LEVEL WARNING SWITCH

- (a) Mount the fuel filter in a soft jaw vise.
- (b) Using pliers, remove the warning switch and O-ring.


NOTICE:

Be careful not to damage the warning switch.

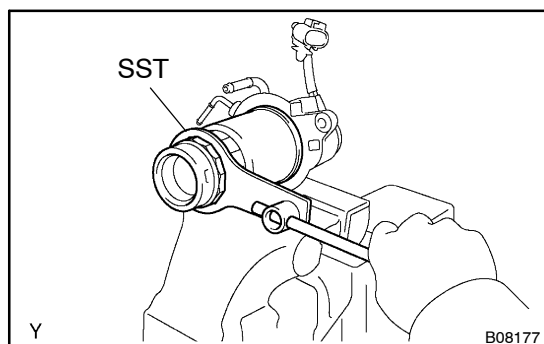

5. REMOVE FUEL FILTER ELEMENT SUB-ASSY

- (a) Using SST, remove the fuel filter.
SST 09228-64030

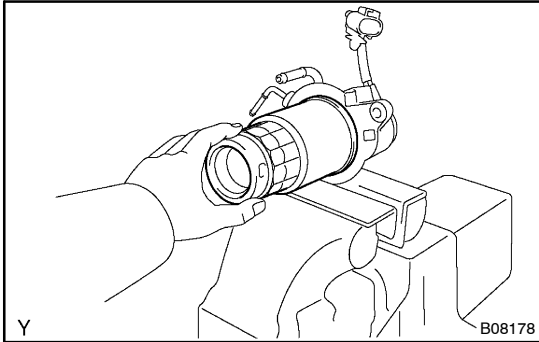

6. INSTALL FUEL FILTER ELEMENT SUB-ASSY

- (a) Check and clean the fuel filter installation surface.
- (b) Apply fuel to the gasket of a new fuel filter.
- (c) Lightly screw the fuel filter into place, and tighten it until the gasket comes into contact with the seat.
- (d) Tighten it additional $3/4$ turn by hand.

7. INSTALL LEVEL WARNING SWITCH

- (a) Install a new O-ring to the warning switch.
- (b) Apply fuel to the O-ring of the warning switch.
- (c) Install the warning switch to a new fuel filter by hand.

8. INSTALL FUEL FILTER ASSEMBLY

Torque: 17 N·m (173 kgf·cm, 13 ft·lbf)

9. INSPECT FUEL LEAK (See page 11-23)