

Removal & Installation and Disassembly & Reassembly

1. REMOVE FRONT SEAT ASSEMBLY RH
2. REMOVE FRONT SEAT ASSEMBLY LH
3. REMOVE REAR No.1 SEAT ASSEMBLY RH (CAPTAN SEAT TYPE)
4. REMOVE REAR No.1 SEAT ASSEMBLY LH (CAPTAN SEAT TYPE)
5. REMOVE REAR No.1 SEAT ASSEMBLY RH (3 TUMBLE AND DETACHABLE SEAT STYPE)
6. REMOVE REAR No.1 SEAT ASSEMBLY LH (3 TUMBLE AND DETACHABLE SEATS TYPE)
7. REMOVE REAR No.1 SEAT ASSEMBLY CENTER (3 TUMBLE AND DETACHABLE SEATS TYPE)
8. REMOVE FRONT DOOR SCUFF PLATE RH
(See page 76-23)
9. REMOVE FRONT DOOR SCUFF PLATE LH
(See page 76-23)
10. REMOVE REAR DOOR SCUFF PLATE RH
(See page 76-23)
11. REMOVE REAR DOOR SCUFF PLATE LH
(See page 76-23)
12. REMOVE AIR DUCT ASSY(W/ REAR HEATER)
 - (a) Remove the shift knob.
 - (b) Remove 4 screws and the shift cover.
 - (c) Remove the 2 screws and the heater air outlet grill. (2 places)
 - (d) Remove the rear floor carpet.
 - (e) Remove 4 screws and the air duct assy.
13. REMOVE REAR SEAT LOCK STRIKER SUB-ASSY LH
 - (a) Remove the 4 bolts and the seat lock striker.
14. REMOVE REAR FLOOR SERVICE HOLE COVER
 - (a) Remove the rear floor service hole cover.
 - (b) Disconnect the fuel sender gage connector.
15. REMOVE FUEL TANK VENT TUBE SET PLATE
 - (a) Remove the 8 bolts and fuel tank vent tube set plate.
16. DRAIN FUEL
17. REMOVE EXHAUST PIPE ASSY CENTER
18. REMOVE FUEL TANK PROTECTOR NO.2
19. SEPARATE PARKING BRAKE CABLE NO.2 CLAMP
 - (a) Remove the bolt and the clamp.
20. SEPARATE PARKING BRAKE CABLE NO.3 CLAMP
 - (a) Remove the bolt and the clamp.
21. SEPARATE FUEL TANK TO FILLER PIPE HOSE
22. SEPARATE FUEL TANK BREATHER TUBE SUB-ASSY NO.2

23. SEPARATE FUEL MAIN TUBE**24. SEPARATE FUEL RETURN TUBE****25. REMOVE FUEL TANK ASSY**

- (a) Remove the 6 bolts and fuel tank.

26. REMOVE FUEL SENDER GAGE ASSY

- (a) Remove the 6 screws and fuel sender gage.

27. REMOVE FUEL TANK PROTECTOR SUB-ASSY NO.1

- (a) Using a drill, remove the rivets and then fuel tank protector.

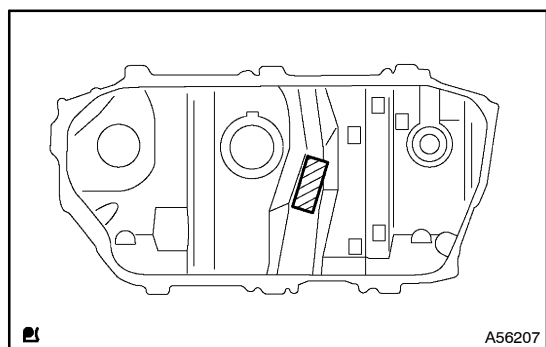
28. INSTALL FUEL TANK PROTECTOR SUB-ASSY NO.1

- (a) Install the fuel tank protector with rivets.

29. INSTALL FUEL SENDER GAGE ASSY

- (a) Install a new gasket and the fuel sender gage.

Torque: 3.5 N·m (36 kgf·cm, 31 in·lbf)

**30. INSTALL FUEL TANK CUSHION NO.1**

- (a) Install the new fuel tank cushion as shown in the illustration.

31. INSTALL FUEL TANK ASSY

- (a) Install the fuel tank with 6 bolts.

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

32. INSTALL PARKING BRAKE CABLE NO.2 CLAMP

Torque: 5.4 N·m (55 kgf·cm, 47 in·lbf)

33. INSTALL PARKING BRAKE CABLE NO.3 CLAMP

Torque: 5.4 N·m (55 kgf·cm, 47 in·lbf)

34. INSTALL FUEL TANK PROTECTOR NO.2

Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)

35. INSTALL EXHAUST PIPE ASSY CENTER

(See [page 5-2](#))

36. INSTALL REAR FLOOR SERVICE HOLE COVER

- (a) Using a new butyl tape set, and install the rear floor service hole cover.

37. INSTALL REAR SEAT LOCK STRIKER SUB-ASSY LH

Torque: 39 N·m (398 kgf·cm, 29 ft·lbf)

38. INSTALL AIR DUCT ASSY (W/ REAR HEATER)

- (a) Install 4 screws and the air duct assy.
(b) Install the floor carpet.
(c) Install the 2 screws and the heater air outlet grille. (2 places)
(d) Install the 4 screws and the shift cover.
(e) Install the shift knob.

39. INSTALL FRONT SEAT ASSEMBLY RH

40. INSTALL FRONT SEAT ASSEMBLY LH

41. □ INSPECT FUEL LEAK (See page 1-23)

42. CHECK EXHAUST LEAKAGE