

EXHAUST PIPE (1AZ-FE)

1501V-01

Removal & Installation and Disassembly & Reassembly

1. REMOVE EXHAUST PIPE ASSY FRONT

2. REMOVE EXHAUST PIPE ASSY CENTER

3. REMOVE TAIL PIPE ASSY

4. INSTALL TAIL PIPE ASSY

5. INSTALL EXHAUST PIPE ASSY CENTER

- (a) Install a new gasket and the center pipe to the tail pipe.

Torque: 43 N·m (439 kgf·cm, 32 ft·lbf)

6. INSTALL EXHAUST PIPE ASSY FRONT

- (a) Using vernier calipers, measure the free length of the compression spring.

Free length: 42mm (1.6535 in)


If the free length is not as specified, replace the compression spring.

- (b) Using a new gasket, install front pipe to center pipe.

Torque: 43 N·m (439 kgf·cm, 32 ft·lbf)

- (c) Install a new gasket and the front pipe to exhaust manifold converter.

Torque: 43 N·m (439 kgf·cm, 32 ft·lbf)

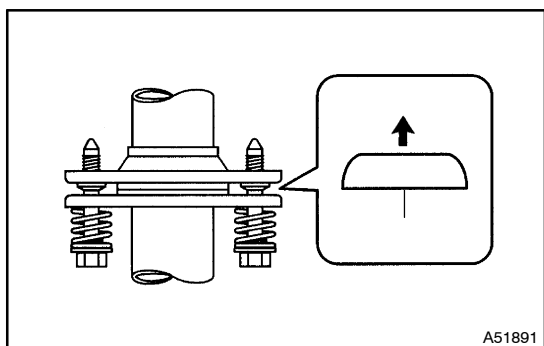

A51891

7. CHECK EXHAUST GAS LEAK