

## RADIATOR ASSY (1CD-FTV)

1606T-01

### Removal & Installation and Disassembly & Reassembly

1. DRAIN ENGINE COOLANT
2. REMOVE RADIATOR RESERVE TANK ASSY

3. REMOVE RADIATOR HOSE INLET

4. REMOVE RADIATOR HOSE OUTLET

5. REMOVE HOOD LOCK ASSY

- (a) Remove the 3 bolts and hood lock assy.

6. REMOVE RADIATOR SUPPORT SUB-ASSY

- (a) Disconnect the horn connector.

- (b) Disconnect the fan w/motor assy connector and wire harness.

- (c) Remove the 4 bolts and nut and radiator support.

7. REMOVE RADIATOR ASSY

- (a) Remove the 2 upper support, and radiator assy.

8. REMOVE RADIATOR SUPPORT LOWER

9. REMOVE FAN ASSY, W/MOTOR

- (a) Remove the 6 bolts and fan w/motor.

10. INSTALL RADIATOR SUPPORT SUB-ASSY

- (a) Install radiator support with the 4 bolts and nut.

**Torque: 7 N·m (71 kgf·cm, 62 in.·lbf)**

11. INSTALL HOOD LOCK ASSY

(See page 75-1)

12. ADD COOLANT (See page 16-19)

13. CHECK ENGINE COOLANT LEAK