


GENERATOR ASSY (1AZ-FE)

REPLACEMENT

19066-01

1. REMOVE FRONT WHEEL RH
2. REMOVE ENGINE UNDER COVER RH
3. REMOVE FAN AND GENERATOR V-BELT
(See page 14-5)
SST 09249-63010

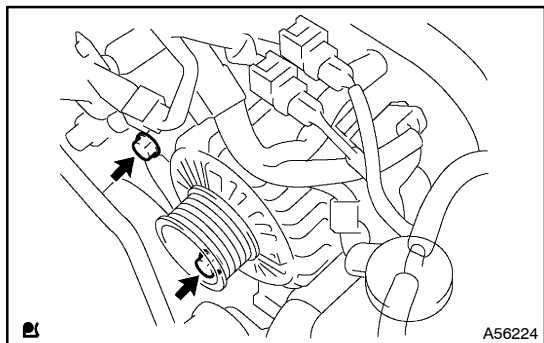

4. REMOVE GENERATOR ASSY

- (a) Disconnect the engine wire as shown in the illustration.
- (b) Remove 3 bolts and alternator assembly.

5. INSTALL GENERATOR ASSY

- (a) Install the alternator assembly.

Torque:

M8 21 N·m (214 kgf·cm, 15 ft·lbf)

M10 52 N·m (530 kgf·cm, 38 ft·lbf)

Wiring harness clamp 8.4 N·m (85 kgf·cm, 74 in·lbf)

Alternator wire 9.8 N·m (100 kgf·cm, 7 ft·lbf)

NOTICE:

Be careful not to put the wire harness in when install the alternator.

6. INSTALL FAN AND GENERATOR V-BELT
(See page 14-5)
SST 09249-63010

7. INSTALL FRONT WHEEL RH
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)