

GENERATOR ASSY (1CD-FTV)

REPLACEMENT

1906B-01

1. REMOVE ENGINE UNDER COVER RH
2. REMOVE V (COOLER COMPRESSOR TO CRANKSHAFT PULLEY) BELT NO.1
(See [page 14-75](#))
3. REMOVE FAN AND GENERATOR V BELT
(See [page 14-75](#))
4. REMOVE EXHAUST PIPE ASSY FRONT
5. REMOVE GENERATOR ASSY
 - (a) Remove the cap and nut, and disconnect the generator wire.
 - (b) Disconnect the generator connector.
 - (c) Remove the 2 bolts and generator.
6. INSTALL GENERATOR ASSY

Torque:

M8 21 N·m (214 kgf·cm, 15 ft·lbf)

M10 52 N·m (530 kgf·cm, 38 ft·lbf)

Alternator wire 9.8 N·m (100 kgf·cm, 7 ft·lbf)

7. INSTALL EXHAUST PIPE ASSY FRONT
(See [page 15-2](#))
8. ADJUST V (COOLER COMPRESSOR TO CRANKSHAFT PULLEY) BELT NO.1
(See [page 14-75](#))
9. CHECK EXHAUST LEAKAGE