

REAR WHEEL ALIGNMENT


2703V-01

ADJUSTMENT

- 1. INSPECT TIRE (See page 28-1)
- 2. MEASURE VEHICLE HEIGHT (See page 26-4)

NOTICE:

Before inspecting the wheel alignment, adjust the vehicle height to the specified value.

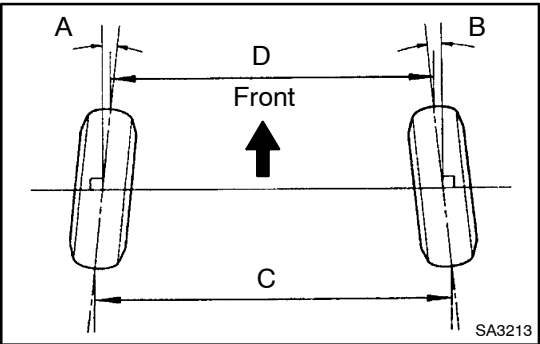

3. INSPECT TOE-IN

Toe-in:

Toe-in (total)	A + B: 0°06' ± 8' (0.10° ± 0.13°) C - D: 2.0 ± 3.0 mm (0.0787 ± 0.1181 in.)
----------------	--

If the toe-in is not within the specified value, inspect and replace the suspension parts as necessary.

4. INSPECT CAMBER

- (a) Install the camber-caster-kingpin gauge or position vehicle on wheel alignment tester.
- (b) Inspect the camber.

Camber:

Camber	Right-left error	-1°26' ± 30' (-1.43° ± 0.5°) 30' (0.5°) or less
--------	------------------	--

If the measured value is not within the specified value, inspect the suspension parts for damage and/or wear and replace them if necessary because camber is not adjustable.