


## REAR AXLE LH HUB BOLT

3005I-01

### REPLACEMENT


1. REMOVE REAR WHEEL
2. SEPARATE REAR DISC BRAKE CALIPER ASSY LH (See page 30-28)
3. REMOVE REAR DISC

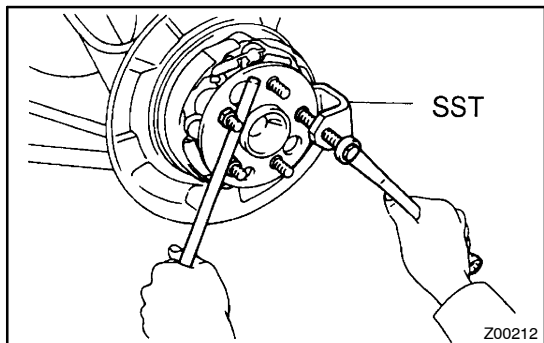

#### 4. REMOVE REAR AXLE LH HUB BOLT

- (a) Using SST and screwdriver or an equivalent to hold, remove the hub bolt.

SST 09628-10011

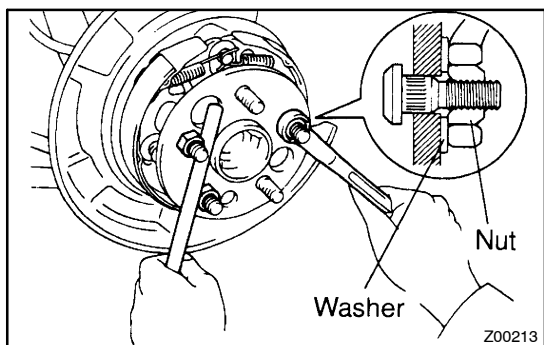

#### 5. INSTALL REAR AXLE LH HUB BOLT

- (a) Install a washer and nut to a new hub bolt as shown in the illustration.
- (b) Using a screwdriver to hold, install the hub bolt by torquing the nut.

#### 6. INSTALL REAR DISC

7. INSTALL REAR DISC BRAKE CALIPER ASSY LH (See page 30-28)
8. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)