


ADJUSTMENT

1. REMOVE REAR WHEEL
2. ADJUST PARKING BRAKE SHOE CLEARANCE (See page 33-13)
3. INSTALL REAR WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
4. INSPECT PARKING BRAKE LEVER TRAVEL
 - (a) Pull the parking brake lever all the way up, and count the number of clicks.
Parking brake lever travel: 4 – 7 clicks at 200 N (20 kgf, 44.1 lbf)
5. ADJUST PARKING BRAKE LEVER TRAVEL
 - (a) Remove the parking brake hole cover.

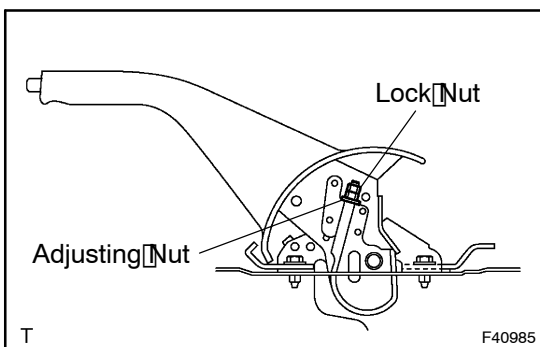

- (b) Loosen the lock nut and turn the adjusting nut until the lever travel is correct.
- (c) Tighten the lock nut.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
- (d) Install the parking brake hole cover.