


REPLACEMENT

1. REMOVE PARKING BRAKE HOLE COVER

2. REMOVE PARKING BRAKE LEVER SUB-ASSY

- (a) Remove the lock nut and adjusting nut.
- (b) Disconnect the parking brake switch connector.

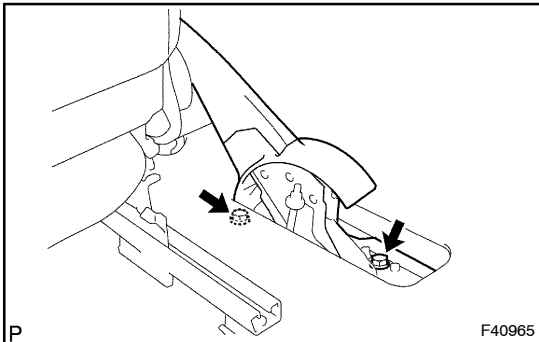

- (c) Remove the 2 bolts and parking brake lever.

3. SEPARATE PARKING BRAKE CABLE ASSY NO.1

4. REMOVE CONSOLE BOX MOUNTING BRACKET NO.1

- (a) Remove the bolt, screw and console box mounting bracket No. 1.

5. REMOVE CONSOLE BOX MOUNTING BRACKET NO.2

- (a) Remove the bolt, screw and console box mounting bracket No. 2.

6. REMOVE PARKING BRAKE SWITCH ASSY

- (a) Remove the screw and parking brake switch.

7. INSTALL PARKING BRAKE SWITCH ASSY

- (a) Install the parking brake switch with the screw.

8. INSTALL CONSOLE BOX MOUNTING BRACKET NO.1

- (a) Remove the bolt, screw and console box mounting bracket No. 1.

Torque:

Bolt: 12.7 N·m (130 kgf·cm, 9 ft·lbf)

Screw: 4.9 N·m (50 kgf·cm, 43 in·lbf)

9. INSTALL CONSOLE BOX MOUNTING BRACKET NO.2

- (a) Remove the bolt, screw and console box mounting bracket No. 2.

Torque:

Bolt: 12.7 N·m (130 kgf·cm, 9 ft·lbf)

Screw: 4.9 N·m (50 kgf·cm, 43 in·lbf)

10. CONNECT PARKING BRAKE CABLE ASSY NO.1

11. INSTALL PARKING BRAKE LEVER SUB-ASSY

- (a) Connect the parking brake cable to the lever and install the adjusting nut and lock nut.
- (b) Install the parking brake lever with the 2 bolts.
Torque: 12.7 N·m (130 kgf·cm, 9 ft·lb)
- (c) Connect the parking brake switch connector.

12. INSTALL PARKING BRAKE HOLE COVER

13. INSPECT PARKING BRAKE LEVER TRAVEL ([See page 33-2](#))

14. ADJUST PARKING BRAKE LEVER TRAVEL ([See page 33-2](#))