


REPLACEMENT

1. REMOVE PARKING BRAKE HOLE COVER

2. REMOVE PARKING BRAKE LEVER SUB-ASSY

- (a) Remove the lock nut and adjusting nut.
- (b) Disconnect the parking brake switch connector.

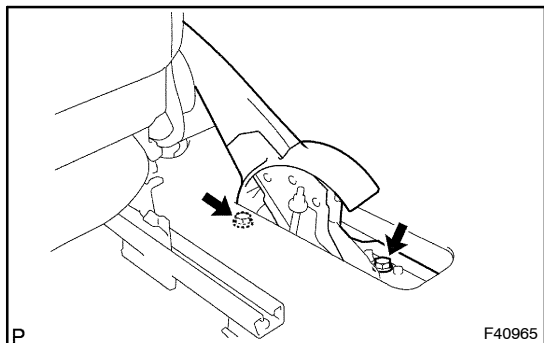

- (c) Remove the 2 bolts and parking brake lever.

3. REMOVE PARKING BRAKE CABLE ASSY NO.1

4. INSTALL PARKING BRAKE CABLE ASSY NO.1

5. INSTALL PARKING BRAKE LEVER SUB-ASSY

- (a) Connect the parking brake cable to the lever and install the adjusting nut and lock nut.
- (b) Install the parking brake lever with the 2 bolts.
Torque: 12.7 N·m (130 kgf·cm, 9 ft·lbf)
- (c) Connect the parking brake switch connector.

6. INSTALL PARKING BRAKE HOLE COVER

7. CHECK PARKING BRAKE LEVER TRAVEL (See page 33-2)

8. ADJUST PARKING BRAKE LEVER TRAVEL (See page 33-2)